



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2130	2677A 2	TOP COWL ASSEMBLY	1,1		
2		39664	INSERT, ROPE GUIDE - TOP CO	1,1		
3	16	21553	STUD, TOP COWL TO MOUNTI	3,3		
4	12	30283	WASHER, TOP COWL STUD	AR,AR		
5	11	21528	NUT, TOP COWL STUD	3,3		
6		39400	SHIELD, REAR - TOP COWL	1,1		
7	10	20646	SCREW, REAR SHIELD TO TOP	3,3		
8	2133	2706A 2	WRAP AROUND COWL ASSEMBI	1,		
8	2133	2706A 3	WRAP AROUND COWL ASSEMBI	,		
9		39606	BLANKET, SOUND ABSORBING	1,1		
10		30413	HOOK, COWL LATCH FASTENI	2,2		
11		38961	HANDLE, COWL LATCH	2,2	SERIAL 00000000-02249145	
12		38964	SWIVEL, COWL LATCH	2,2	SERIAL 00000000-02249145	
13	17	21057	PIN, HINGE - COWL LATCH HA	4,4	SERIAL 00000000-02249145	
14	53	21058	"E" RING, COWL LATCH HINGE	4,4	SERIAL 00000000-02249145	
15		46785A 1	COWL LATCH ASSEMBLY	,2	SERIAL 02249146-09999999	
16		39628	BUTTON, FRONT COVER RELEA	1,1		
17	24	20099	SPRING, COMPRESSION - FRON	1,1		
18	12	29245	WASHER, FRONT COVER RELEA	1,1		
19		39493	CATCH, FRONT COVER - TOP CO	1,1		
20	10	22523	SCREW, FRONT COVER LATCH	2,2		
21	2127	2666A 2	FRONT COVER ASSEMBLY, COM	1,		
21	2127	2666A 3	FRONT COVER ASSEMBLY, COM	,1		
22		39505	BASE, FRONT COVER LATCH	1,1		
23	10	26500	SCREW, LATCH BASE TO FRO	2,2		
24	12	26014	WASHER, LATCH BASE SCREW	AR,AR		
25		39482	HOOK, FRONT COVER LATCH	1,1		
26	24	39598	SPRING, TORSION - FRONT CC	1,1		
27	17	39599	PIN, PIVOT - FRONT COVER LA	1,1		
28		39936	BLANKET, SOUND ABSORBING	1,1		
29	2131	2678	HOUSING, STARTER	1,		
29	2131	3020	HOUSING, STARTER	,1		
30	10	37562	SCREW, STARTER HOUSING TO	1,1		
31	13	26421	LOCKWASHER, STARTER HOUS	1,1		
32	10	22421	SCREW, STARTER HOUSING TO	2,		
32	10	22421	SCREW, STARTER HOUSING TO	,1		
32	10	21807	SCREW, STARTER HOUSING TO	,		
33	11	20361	NUT, STARTER HOUSING TO CF	2,2		
34		30976	PULLEY, STARTER CABLE	1,1		
35	10	37892	SCREW, PULLEY TO STARTER F	1,1		
36	12	22887	WASHER, PULLEY SCREW	1,1		