



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		39299A	2 PLATE ASSEMBLY, MOUNTING	1,1		
2	12	36555	WASHER, NHLON - WATER INLET	1,1		
3	26	25329	SEAL, RUBBER - WATER INLET	1,1		4
4		33513	RETAINER, WATER INLET TUBE	1,1		
5	10	20540	SCREW, RETAINER TO MOUNTING	1,1		
6	27	39401	GASKET, POWERHEAD TO MOUNTING	1,1		4
7		39622	SEAL, MOUNTING PLATE TO BOTTOM COWL	1,1		
8	27	39402	GASKET, MOUNTING PLATE TO BOTTOM COWL	1,1		
9	2129	3259A	2 BOTTOM COWL ASSEMBLY	1,		
9	2129	3728A	2 BOTTOM COWL ASSEMBLY	1,1		
10		48472	COVER, HARNESS HOLE	1,1		
11	10	20189	SCREW, COVER TO BOTTOM COWL	2,2		
12		46266A	2 COVER PLATE ASSEMBLY, BOTTOM COWL	1,1		
13		39591	PAD, SOUND - COVER PLATE	1,1		
14	10	30663	SCREW, COVER PLATE TO BOTTOM COWL	2,2		
15		39630	CUSHION, RUBBER - BOTTOM COWL	1,1		
16		39777	BOOT, THROTTLE CABLE - BOTTOM COWL	1,1		
17		39778	BOOT, FUEL ADAPTOR - BOTTOM COWL	1,1		
18		39780	BOOT, SHIFT CABLE - BOTTOM COWL	1,1		
19		39058	SEAL, SHIFT HANDLE - BOTTOM COWL	1,1		
20	32	26330	HOSE, TELL TALE - COWL TO CYLINDER	1,1		
21	22	25885	ELBOW, TELL TALE HOSE TO CYLINDER	1,1		
22	22	29111	CONNECTOR, TELL TALE HOSE	1,		
23		52889	NOZZLE, TELL TALE HOSE TO BOTTOM COWL	1,1	PART OF A-2129-3728A2 BOTTOM COWL	
24	10	34222	SCREW, TELL TALE NOZZLE TO BOTTOM COWL	1,1	PART OF A-2129-3728A2 BOTTOM COWL	
25		48071A	1 STOP SWITCH ASSEMBLY	1,1		
26		30859	INSULATOR, SLEEVE - INNER	1,1		
27	24	30858A	1 SPRING AND CONTACT ASSEMBLY	1,1		
28		38950A	1 COVER ASSEMBLY, STOP SWITCH	1,1		
29	12	38949	WASHER, SEALING - STOP SWITCH	1,1		
30	13	21972	LOCKWASHER, STOP SWITCH	1,1		
31	11	21971	NUT, STOP SWITCH LEADS BOTTOM COWL	1,1		
32	54	26550	CLIP, STOP SWITCH LEADS BOTTOM COWL	1,1		
33	10	35519	SCREW, CLIP TO BOTTOM COWL	1,1		
34		22789	"D" WASHER, CLIP TO BOTTOM COWL	1,1		