



STEERING HANDLE ASSEMBLY

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		47874A	2 STEERING HANDLE ASSEMBLY	1	SERIAL 00000000-02432535	
-		49557A	1 STEERING HANDLE ASSEMBLY	1	SERIAL 02432536-09999999	
-		49557A	5 STEERING HANDLE ASSEMBLY	1,1		
1		27763	GRIP, RUBBER - STEERING HA	1,1		
2		39352	BODY AND SHAFT, STEEREINC	1,1		
3		31001	INDICATOR, SPEED AND LIMIT	1,1		
4	10	31002	SCREW, SET - SPEED ANS SHI	1,1		
5	10	22290	SCREW, DRIVE - INDICATOR T	1,1		
6	23	30677	BUSHING, NYLON - STEERING	1,1		
7		47874A	1 STEERING HANDLE ASSEMBL	1	SERIAL 00000000-02432535	
7A		49557	ARM, STEERING	1,1	SERIAL 02432536-09999999	
7B		49558	KNUCKLE, STEERING ARM SEI	1,1	SERIAL 02432536-09999999	
7C	23	49555	BUSHING, RUBBER - STEERIN	1,1	SERIAL 02432536-09999999	
8	23	28100	BUSHING, NYLON - STEERING	1,1		
9	43	47765	GEAR, BALL - STEERING HANC	1		
9	43	53205	GEAR, BALL - STEERING HANC	1,1		
10	17	26862	PIN, BALL GAR TO STEERING	1,1		
11	53	47821	RING, RETAINING - BALL GEAF	1		
11	53	53204	RING, RETAINING - BALL GEAF	1,1		
12		48003	PIVOT, STEERING HANDLE TO B	2,2		
13	15	48002015	SHIM, STEERING HANDLE PIVO	2,2		
14	10	56214	SCREW, STEERING HANDLE TO	2,2		
15		47825A	1 UNIVERSAL JOINT ASSEMBLY	1,1		
16	23	48005	SLEEVE, UNIVERSAL JOINT	1,1		
17	43	47765	GEAR, BALL - UNIVERSAL JOINT	1		
17	43	53205	GEAR, BALL - UNIVERSAL JOINT	1,1		
18	17	26862	PIN, BALL GEAR TO UNIVERSAL	1,1		
19	53	47821	RING, RETAINING - BALL GEAR	1		
19	53	53204	RING, RETAINING - BALL GEAR	1,1		
20		47671	BRACKET, STEERING ARM	1,1		
21		47743	BOOT, UNIVERSAL JOINT	1,1		
22	23	47818	BUSHING, STEERING ARM BRAC	1,1		
23	24	47744	SPRING, DETENT - STEERING H	2,2		
24	10	37571	SCREW, DETENT SPRING TO ST	2,2		
25	10	26132	SCREW, STEERING ARM BRACK	3,3		
26	11	46793	NUT, STEERING ARM BRACKET	3,3		