



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		53238A 3	FUEL PUMP ASSEMBLY	1		
2	21	30430A 2	CHECK VALVE ASSEMBLY	1		
3		53245A 1	DIAPHRAGM KIT, FUEL PUMF	1		
4			GASKET, FUEL PUMP TO B,	1		
5			GASKET, FUEL PUMP	2		
6		53241	BASE, FUEL PUMP	1		
7		53545	COVER, FUEL PUMP	1		
8	10	32627	SCREW, FUEL PUMP TO BASE (1	4		
9	12	20128	WASHER, FUEL PUMP SCREWS	4		
10	32	54429	FUEL LINE, FUEL PUMP TO CAR	1		
11		53544	BRACKET, FUEL PUMP TO CRAN	1		
12	10	29200	SCREW, BRACKET TO FUEL PUM	2		
13	10	45862	SCREW, FUEL PUMP BRACKET	1		
14	11	46438	NUT, FUEL PUMP BRACKET SCR	1		
15	22	22995	FITTING, INLET - FUEL PUMP	1		
16	22	22946	SLEEVE, RUBBER - FUEL PUMF	1		
17	22	22948	NUT, FUEL PUMP INLET FITTIN	1		
18	32	48019	FUEL LINE, INLET - ADAPTOR TC	1		
19		30188	CUP WASHER, ADAPTOR	1		
20	24	23067	SPRING, ADAPTOR STEM	1		
21	25	20415	"O" RING, ADAPTOR STEM	1		
22		23069	STEM, CHECK UNIT ADAPTOR	1		
23		22833	ADAPTOR, CHECK UNIT	1		
24	10	20784	SCREW, CHECK UNIT ADAPTOR	2		
25	11	20361	NUT, CHECK UNIT ADAPTOR SC	2		
26	22	54064	CONNECTOR, HOSE TO FUEL PL	1		
27	32	48638	HOSE, FUEL PUMP TO CYLINDER	2		
28	22	53553	ELBOW, HOSE TO CYLINDER BL	1		
29	54	20387	CLAMP, FUEL PUMP HOSE TO EL	4		
30	22	54090	ELBOW, HOSE TO FUEL PUMP (E	1		
31	22	33373	ELBOW, HOSE TO CYLINDER BL	1		