



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1627	3482A13	GEAR HOUSING ASSEMBLY, CO	1	
-	1627	3482A14	GEAR HOUSING ASSEMBLY, CO	1	
-	1627	4404A 4	GEAR HOUSING ASSEMBLY, CO	1	
-	1627	4404A 5	GEAR HOUSING ASSEMBLY, CO	1	
1	1627	3482A 1	GEAR HOUSING ASSEMBLY(SE	1	
1	1627	4404A 6	GEAR HOUSING ASSEMBLY(SE	1	
2	17	20201	PIN, DOWEL - GEAR HOUSIN	1	
3	16	58137	STUD, WATER PUMP TO GE	3	
4	16	58135	STUD, GEAR HOUSING TO D	1	
5	31	28157	BEARING, ROLLER - DRIVE S	1	
6	45	56792A 1	DRIVE SHAFT ASSEMBLY(SHO	1	
6	45	56793A 1	DRIVE SHAFT ASSEMBLY(LON	1	
7	14	49311	TAB WASHER, PINION GEAR	1	
8	10	49908	SCREW, PINION GEAR TO DF	1	
9	43	45189	GEAR, PINION	1	
10	10	28634	SCREW, GREASE FILLER	1	
11	12	20260	WASHER, GREASE FILLER SCF	1	
12	19	48750	PLUG, GEAR HOUSING FLUSHI	1	
13	12	49221	WASHER, NEOPRENE - GEAR I	1	
14	10	28653	SCREW, GREASE VENT	1	
15	12	20262	WASHER, GREASE VENT SCRE	1	
16		56829A 1	SHAFT ASSEMBLY, SHIFT - LO	1	
16		56830A 1	SHAFT ASSEMBLY, SHIFT - LO	1	
17	25	38933	"O" RING, LOWER SHIFT SH	1	4
18	53	22899	RING, RETAINING - SHIFT SH	1	
19	23	30676A 1	BUSHING ASSEMBLY, SHIFT SI	1	
20	25	26802	"O" RING, SHIFT SHAFT BUS	1	4
21	26	30696	OIL SEAL, SHIFT SHAFT BUSI	1	
22	10	39149	SCREW, SHIFT SHAFT BUSHIN	1	
23	15	20804A 1	SHIM, BALL BEARING TO GEAF	AR	
24	30	47158	BEARING, BALL - DRIVE SHAFT	1	
25	53	33463	RING, RETAINING - BALL BEAR	1	
26	15	20804A 1	SHIM, GEAR HOUSING TO WA	AR	
27	27	39626	GASKET, WATER PUMP BASE	1	4
28	25	33466	"O" RING, WATER PUMP BASE	1	4
29	46	48744A 1	WATER PUMP BASE ASSEMBL	1	
30	26	20070	OIL SEAL, WATER PUMP BAS	1	
31	26	33467	OIL SEAL, WATER PUMP BAS	1	
32	17	35973	PIN, DOWEL, WATER PUMF	2	
33	27	39625	GASKET, WATER PUMP BASE	1	4
34		28624	PLATE, FACE, WATER PUMPE	1	