



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
		49557A 5	STEERING HANDLE ASSEMBLY	1		
1		27763	GRIP, RUBBER - STEERING HA	1		
2		39352	BODY AND SHAFT, STEERING	1		
3		31001	INDICATOR, SPEED AND LIMIT	1		
4	10	31002	SCREW, SET - SPEED AND SHI	1		
5	10	22290	SCREW, DRIVE - INDICATOR T	1		
6	23	30677	BUSHING NYLON - STEERING I	1		
7		49557	ARM, STEERING	1		
8		49558	KNUCKLE, STEERING ARM	1		
9	23	49555	BUSHING, RUBBER - STEERING	1		
10	23	28100	BUSHING, NYLON - STEERING H	1		
11	43	53205	GEAR, BALL - STEERING HANC	1		
12	17	26862	PIN, BALL GEAR TO STEERING	1		
13	53	53204	RING, RETAINING - BALL GEAR	1		
14		48003	PIVOT, STEERING HANDLE TO B	2		
15	15	48002015	SHIM, STEERING HANDLE PIVOT	AR		
16	10	56214	SCREW, STEERING HANDLE TO	2		
17		47825A 1	UNIVERSAL JOINT ASSEMBLY	1		
18	23	48005	SLEEVE, UNIVERSAL JOINT	1		
19	43	53205	GEAR, BALL - UNIVERSAL JOINT	1		
20	17	26862	PIN, BALL GEAR TO UNIVERSAL	1		
21	53	53204	RING, RETINING - BALL GEAR	1		
22		47671	BRACKET, STEERING ARM	1		
23		47743	BOOT, UNIVERSAL JOINT	1		
24	23	47818	BUSHING, STEERING ARM BRAC	1		
25	24	47744	SPRING, DETENT - STEERING H.	2		
26	10	37571	SCREW, DETENT SPRING TO ST	2		
27	10	26132	SCREW, STEERING ARM BRACK	3		
28	11	46793	NUT, STEERING ARM BRACKET	3		