



| Parts List | | | | | | |
|------------|-------|----------|-----------------------------|-----|--------------------------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | 2130 | 3974A 2 | TOP COWL ASSEMBLY | 1 | SERIAL 02827677-02893435 | |
| 2 | | 39664 | INSERT, ROPE GUIDE - TOP CC | 1 | SERIAL 02827677-02893435 | |
| 4 | 16 | 21553 | STUD, TOP COWL TO MOUNTI | 3 | SERIAL 02827677-02893435 | |
| 1 | 2130 | 4361A 2 | TOP COWL ASSEMBLY SERIAL | 1 | SERIAL 02991679-09999999 | |
| 2 | | 58657 | INSERT, ROPE GUIDE - TOP CC | 1 | SERIAL 02991679-09999999 | |
| 3 | 53 | 58656 | RING, RETAINING - ROPE GUI | 1 | SERIAL 02991679-09999999 | |
| 4 | 16 | 21553 | STUD, TOP COWL TO MOUNTI | 3 | SERIAL 02991679-09999999 | |
| 5 | 12 | 20722 | WASHER, TOP COWL STUD | 3 | SERIAL 02991679-09999999 | |
| 6 | 11 | 35814 | NUT, TOP COWL STUD | 3 | | |
| 7 | | 39400 | SHIELD, REAR - TOP COWL | 1 | | |
| 8 | | 37370 | SCREW, REAR SHIELD TO TOP | 3 | | |
| 9 | 2133 | 2706A 5 | WRAP AROUND COWL ASSEMB | 1 | | |
| 10 | | 39606 | BLANKET, SOUND ABSORBING | 1 | | |
| 11 | | 46785A 1 | COWL LATCH ASSEMBLY | 2 | | |
| 12 | | 30413 | HOOK, COWL LATCH FASTENI | 2 | | |
| 13 | | 39628 | BUTTON, FRONT COVER RELEA | 1 | | |
| 14 | 24 | 20099 | SPRING, COMPRESSION - FRON | 1 | | |
| 15 | 12 | 29245 | WASHER, FRONT COVER RELEA | 1 | | |
| 16 | | 39493 | CATCH, FRONT COVER - TOP CO | 1 | | |
| 17 | 10 | 22523 | SCREW, FRONT COVER LATCH | 2 | | |
| 18 | 2127 | 2666A 6 | FRONT COVER ASSEMBLY COM | 1 | | |
| 19 | | 39505 | BASE, FRONT COVER LATCH | 1 | | |
| 20 | 10 | 26500 | SCREW, LATCH BASE TO FRO | 2 | | |
| 21 | 12 | 26014 | WASHER, LATCH BASE SCREW | AP | | |
| 22 | | 39482 | HOOK, FRONT COVER LATCH | 1 | | |
| 23 | 24 | 39598 | SPRING, TORSION - FRONT CC | 1 | | |
| 24 | 17 | 39599 | PIN, PIVOT - FRONT COVER LA | 1 | | |
| 25 | | 39936 | BLANKET, SOUND ABSORBING | 1 | | |
| 26 | | 57031A 2 | HOUSING ASSEMBLY, STARTER | 1 | | |
| 27 | 10 | 37562 | SCREW, STARTER HOUSING TO | 1 | | |
| 28 | 13 | 26993 | LOCKWASHER, STARTER HOUS | 1 | | |
| 29 | 10 | 24644 | SCREW, STARTER HOUSING TO | 1 | | |
| 29 | 10 | 22659 | SCREW, STARTER HOUSING TO | 1 | | |
| 30 | 11 | 20361 | NUT, STARTER HOUSING TO CF | 2 | | |
| 31 | | 47430 | BUMPER, RUBBER - STARTER H | 1 | | |
| 32 | | 55860 | PULLEY, STARTER CABLE | 1 | | |
| 33 | 10 | 37892 | SCREW, PULLEY TO STARTER H | 1 | | |
| 34 | | 53111 | RETAINER, PULLEY SCREW | 1 | | |
| 35 | 23 | 30977 | SPACER, PULLEY SCREW | 1 | | |
| 36 | 11 | 20110 | NUT, PULLEY SCREW | 1 | | |
| 37 | 14 | 20165 | TAPER WASHER, SHAFT | 1 | | |