



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		39299A 2	PLATE ASSEMBLY, MOUNTING	1	SERIAL 02827677-02893435	
1		58978A 2	PLATE ASSEMBLY, MOUNTING	1	SERIAL 02991679-09999999	
2	12	36555	WASHER, NYLON - WATER INL	1		
3	26	25329	SEAL , RUBBER - WATER INLE	1		4
4		33513	RETAINER, WATER INLET TUBE	1		
5	10	20540	SCREW, RETAINER TO MOUNTI	1		
6	27	39401	GASKET, POWERHEAD TO MOU	1		4
7		39622	SEAL, MOUNTING PLATE TO BO	1		
8	27	39402	GASKET, MOUNTING PLATE TO	1		4
9	2129	3956A 2	BOTTOM COWL ASSEMBLY	1	SERIAL 02827677-02893435	
9	2129	4405A 2	BOTTOM COWL ASSEMBLY	1	SERIAL 02991679-09999999	
10		48472	COVER, HARNESS HOLE	1		
11	10	20189	SCREW, COVER TO BOTTOM C	2		
12		46266A 2	COVER PLATE ASSEMBLY, BOTI	1		
13		39591	PAD, SOUND - COVER PLATE	1		
14	10	30663	SCREW, COVER PLATE TO BOT	3		
15		39630	CUSHION , RUBBER - BOTTOM C	1		
16		39777	BOOT, THROTTLE CABLE - BOTI	1		
17		39778	BOOT, FUEL ADAPTOR - BOTTO	1		
18		39780	BOOT, SHIFT CABLE - BOTTOM C	1		
19		39058	SEAL, SHIFT HANDLE - BOTTOM	1		
20	32	34395A 1	HOSE, TELL TALE - COWL TO CY	1		
21	22	25885	ELBOW, TELL TALE HOSE TO CY	1		
22		52889	NOZZLE, TELL TALE HOSE TO B	1	PART OF BOTTOM COWL ASSE	
23	10	34222	SCREW, TELL TALE NOZZLE TO	1	PART OF BOTTOM COWL ASSE	
24		57186A 4	STOP SWITCH ASSEMBLY	1	SERIAL 02827677-02893435	
25	12	38949	WASHER, SEALING - STOP Sw	1	SERIAL 02827677-02893435	
26	13	21972	LOCKWASHER, STOP SWITCH	1	SERIAL 02827677-02893435	
27	11	21971	NUT, STOP SWITCH TO BOTTC	1	SERIAL 02827677-02893435	
24		59065A 1	STOP SWITCH ASSEMBLY	1	SERIAL 02991679-09999999	
25	12	59061	WASHER, STATOR LEAD TO ST	1	SERIAL 02991679-09999999	
26	13	21972	LOCKWASHER, STOP SWITCH C	1	SERIAL 02991679-09999999	
27	11	21971	NUT, STOP SWITCH TO BOTTON	1	SERIAL 02991679-09999999	
28		38950A 1	COVER ASSEMBLY, STOP SWITC	1	SERIAL 02991679-09999999	
29	13	26996	LOCKWASHER, STATOR LEAD N	1	SERIAL 02991679-09999999	
30	11	20645	NUT, STATOR LEAD TO STOP S	1	SERIAL 02991679-09999999	