



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1427	3293A 1	CLAMP BRACKET ASSEMBLY	2		
2		22477A 4	THUMB SCREW ASSEMBLY	2		
3	12	20214	WASHER, THUMB SCREW	2		
4		30685	TILT TUBE, CLAMP BRACKET TO	1		
5	12	52864	SHIM, CLAMP BRACKET TILT TU	2		
6	11	30499	NUT, TILT TUBE FASTENING	2		
7	10	26483	BOLT, CLAMP BRACKET TO TRA	2		
8	12	26485	WASHER, CLAMP BRACKET SCR	2		
9	11	26484	NUT, CLAMP BRACKET SCREW	2		
10	17	56373A 1	TILT LOCK PIN ASSEMBLY	1		
11	16	20657	STUD, CLAMP BRACKET	1	SERIAL 02827677-02893435	
12	23	20658	SPACER, CLAMP BRACKET STUC	1	SERIAL 02827677-02893435	
13	12	24812	WASHER, CLAMP BRACKET STU	1	SERIAL 02827677-02893435	
11	16	59620	STUD, CLAMP BRACKET (8")	1	SERIAL 02991679-09999999	
12	23	59621	SPACER, CLAMP BRACKET STUC	1	SERIAL 02991679-09999999	
14	13	26993	LOCKWASHER, CLAMP BRACKET	2		
15	11	28770	NUT, CLAMP BRACKET STUD	2		
16	17	39585	SWIVEL PIN	1	SERIAL 02827677-02893435	
16	17	59798	SWIVEL PIN	1	SERIAL 02991679-09999999	
17		33423	CO-PILOT DISC	1		
18	10	26132	SCREW, CO-PILOT DISC TO SAD	3		
19	11	46793	NUT, CO-PILOT DISC TO SADLE	3		
20	1461	2683A 2	SWIVEL BRACKET ASSEMBLY	1		
21	25	29845	"O" RING, SWIVEL BRACKET	2		4
22	22	31345	FITTING, GREASE - SWIVEL BF	1		
23		29359	LUBRICAP, SWIVEL BRACKET GF	1		
24		39307	PLATE, CLAMP - CO-PILOT	1		
25		20203	DISC, FRICTION - CLAMP PLATE	4		
26	10	56784	SCREW, CLAMP PLATE TO SWIV	1		
27	38	56745	SERIAL PLATE	1		
28	10	25612	SCREW, DRIVE - SERIAL PLATE	4		
29		55851	LEVER, TILT STOP	1		
30	10	29237	SCREW, RETAINING - LEVER TO	1		
31	13	36076	WASHER, WAVE - TILT STOP LE	1		
32	15	37711020	SHIM, RETAINING SCREW	1		
33	11	46887	NUT, TILT STOP LEVER SCREW	2		
34	10	27791	SCREW, ANCHOR - TILT STOP LI	1		
35		33417A 1	REVERSE LOCK LEVER ASSEMB	1		
36		26092	ROD, REVERSE LOCK LEVER	1		
37	23	26841	BUSHING, NYLON - REVERSE LC	2		
38	19	46882	COTTER PIN, REVERSE LOCK LE	1		