



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		58978A 2	PLATE ASSEMBLY, MOUNTING	1		
2	12	36555	WASHER, NYLON - WATER INLET	1		
3	26	25329	SEAL, RUBBER - WATER INLET	1		4
4		33513	RETAINER, WATER INLET TUBE	1		
5	10	20540	SCREW, TETAINER TO MOUNTING	1		
6	27	39401	GASKET, POWERHEAD TO MOUNTING	1		4
7		39622	SEAL, MOUNTING PLATE TO BOTTOM COWL	1		
8	27	39402	GASKET, MOUNTING PLATE TO BOTTOM COWL	1		4
9	2129	4636A 2	BOTTOM COWL ASSEMBLY	1		
10		48472	COVER, HARNESS HOLE	1		
11	10	61802	SCREW, COVER TO BOTTOM COWL	2		
12		46266A 2	COVER PLATE ASSEMBLY, BOTTOM COWL	1		
13		39591	PAD, SOUND - COVER PLATE	1		
14	10	30663	SCREW, COVER PLATE TO BOTTOM COWL	3		
15		39630	CUSHION, RUBBER - BOTTOM COWL	1		
16		60886	BOOT, THROTTLE CABLE - BOTTOM COWL	1		
17		39778	BOOT, FUEL ADAPTOR - BOTTOM COWL	1		
18		39780	BOOT, SHIFT CABLE - BOTTOM COWL	1		
19		39058	SEAL, SHIFT HANDLE - BOTTOM COWL	1		
20	32	34395A 1	HOSE, TELL TALE - COWL TO CYLINDER	1		
21		39180	ELBOW, TELL TALE HOSE TO CYLINDER	1	C-22-25885 IS PART OF CYLINDER	
22		52889	NOZZLE, TELL TALE HOSE TO BOTTOM COWL	1	PART OF BOTTOM COWL ASSEMBLY	
23	10	35519	SCREW, TELL TALE NOZZLE TO BOTTOM COWL	1	PART OF BOTTOM COWL ASSEMBLY	
24		59065A 1	STOP SWITCH ASSEMBLY	1		
25	12	59061	WASHER, STATOR LEAD TO STOP SWITCH	1		
26	13	21972	LOCKWASHER, STOP SWITCH C	1		
27	22	21971	NUT, STOP SWITCH TO BOTTOM COWL	1		
28		38950A 1	COVER ASSEMBLY, STOP SWITCH	1		
29	13	26996	LOCKWASHER, STATOR LEAD NUT	1		
30	11	20645	NUT, STATOR LEAD TO STOP SWITCH	1		