



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		53238A	FUEL PUMP ASSEMBLY	1	
2	21	30430A	CHECK VALVE ASSEMBLY	2	
3		53245A	DIAPHRAGM KIT, FUEL PUMP	1	4
4			GASKET, FUEL PUMP TO B	1	4
5			GASKET, FUEL PUMP	2	4
6		53241	BASE, FUEL PUMP	1	
7		61541	COVER, FUEL PUMP	1	
8	10	32627	SCREW, FUEL PUMP TO BASE (1	4	
9	12	20128	WASHER, FUEL PUMP SCREWS	4	
10	32	54429	FUEL LINE, FUEL PUMP TO CARB	1	
11		53544	BRACKET, FUEL PUMP TO CRAN	1	
12	10	29200	SCREW, BRACKET TO FUEL PUM	2	
13	10	45862	SCREW, FUEL PUMP BRACKET	1	
14	11	46438	NUT, FUEL PUMP BRACKET SCR	1	
15	22	22995	FITTING, INLET - FUEL PUMP	1	
16	22	22946	SLEEVE, RUBBER - FUEL PUM	1	
17	22	22948	NUT, FUEL PUMP INLET FITTIN	1	
18	32	48019	FUEL LINE, INLET - ADAPTOR TC	1	
19		30188	CUP WASHER, ADAPTOR	1	
20	24	23067	SPRING, ADAPTOR STEM	1	
21	25	20415	"O" RING, ADAPTOR STEM	1	4
22		23069	STEM, CHECK UNIT ADAPTOR	1	
23		22833	ADAPTOR, CHECK UNIT	1	
24	10	56354	SCREW, CHECK UNIT ADAPTOR	2	
25	32	52742A	HOSE, FUEL PUMP TO CYLINDE	1	
26	22	53553	ELBOW, HOSE TO CYLINDER BL	1	
27	54	20387	CLAMP, FUEL PUMP HOSE TO EL	2	
28	22	54090	ELBOW, HOSE TO FUEL PUMP (E	1	