



Parts List							
Ref	Class	Part	Description	Qty	Comment	Footnote	
		1627	4404A 4	GEAR HOUSING ASSEMBLY, CO	1	A-1627-4404A4 AND 1-1627-4404	
		1627	4404A 5	GEAR HOUSING ASSEMBLY, CO	1	A-1627-4404A4 AND 1-1627-4404	
1	1627	4404A 6	GEAR HOUSING ASSEMBLY	1			
2	17	20201	PIN, DOWEL - GEAR HOUSIN	1			
3	16	58137	STUD, WATER PUMP TO GEA	3			
4	16	58135	STUD, GEAR HOUSING TO D	1			
5	31	28157	BEARING, ROLLER - DRIVE S	1			
6	45	56792A 1	DRIVE SHAFT ASSEMBLY (SHC	1			
6	45	56793A 1	DRIVE SHAFT ASSEMBLY (LONG	1			
7	14	49911	TAB WASHER, PINION GEAR	1			
8	10	49908	SCREW, PINION GEAR TO DF	1			
9	43	45189	GEAR, PINION	1			
10	10	28634	SCREW, GREASE FILLER (1/4"	1			
11	12	20260	WASHER, GREASE FILLER SCF	1			
12	19	48750	PLUG, GEAR HOUSING FLUSHI	1			
13	12	49221	WASHER, NEOPRENE - GEAR I	1			
14	10	28653	SCREW, GREASE VENT (1/4")	1			
15	12	20262	WASHER, GREASE VENT SCRE	1			
16		56829A 1	SHAFT ASSEMBLY, SHIFT - LO	1			
16		56830A 1	SHAFT ASSEMBLY, SHIFT - LO	1			
17	25	38933	"O" RING, LOWER SHIFT SH	1			
18	53	22899	RING, RETAINING - SHIFT SH	1			
19	23	30676A 1	BUSHING ASSEMBLY, SHIFT SI	1			
20	25	26802	"O" RING, SHIFT SHAFT BUS	1			
21	26	30696	OIL SEAL, SHIFT SHAFT BUSI	1			
22	10	39149	SCREW, SHIFT SHAFT BUSHIN	1			
23	15	20804A 1	SHIM, BALL BEARING TO GEAR	AR			
24	30	47158	BEARING, BALL - DRIVE SHAFT	1			
25	53	33463	RING, RETAINING - BALL BEAR	1			
26	15	20804A 1	SHIM, GEAR HOUSING TO WA	AR			
27	27	39626	GASKET, WATER PUMP BASE	1			
28	25	33466	"O" RING, WATER PUMP BASE	1			
29	46	48744A 1	WATER PUMP BASE	1			
30	26	20070	OIL SEAL, WATER PUMP BASE	1			
31	26	33467	OIL SEAL, WATER PUMP BASE	1			
32	17	35973	PIN, DOWEL - WATER PUMP	2			
33	27	39625	GASKET, WATER PUMP BASE	1			
34		39624	PLATE, FACE - WATER PUMP E	1			
35	27	39623	GASKET, FACE PLATE TO WAT	1			
36	47	56780	IMPELLER, WATER PUMP PAR	1	PART OF DRIVE SHAFT ASSEMI		
37	28	56661	KEY, IMPELLER DRIVE PART O	1	PART OF DRIVE SHAFT ASSEMI		