



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	336	4524A 1	COVER ASSEMBLY	1		
2	10	60491	SCREW, COVER TO MODULE (5/	2		
3	336	4516A 2	IGNITION MODULE ASSEMBLY	1		
4	10	59800	SCREW< MODULE TO STATOR (	2		
4	10	59800	SCREW, MODULE TO STATOR (E	2		
4	10	59800	SCREW, MODULE TO STATOR (E	2		
4	10	59800	SCREW, MODULE TO STATOR (E	2		
5	10	36046	SCREW, MODULE - COIL LEADS	3		
6	13	26996	LOCKWASHER, MODULE - IGNIT	2		
7	11	45076	NUT, MODULE - IGNITION COIL	2		
8	336	4468A 1	COIL, HIGH SPEED	1		
8	336	4467A 1	COIL, LOW SPEED	1		
9	54	59538	CLIP, COIL RETAINING	2		
10	54	59539	CLIP, COIL RETAINING	2		
11	336	4463	CONDENSER ASSEMBLY	1		
12	10	62269	SCREW< CONDENSER ATTACHI	2		
13	336	4477A 1	STATRO ASSEMBLY	1		
14	336	4458	PLATE, STATOR HOLD DOWN	2		
15	10	35400	SCREW, HOLD DOWN PLATE TC	4		
16	15	33910015	SHIM, STATOR PLATE TO UPPE	1		
17	336	3989	WICK, CAM WIPER - STATER AS	1		
18	336	4318A 2	MAKER ASSEMBLY, STATOR HO	2		
19	10	56266	SCREW, MAKER TO STATOR HO	4		
20		59710	BRACKET, LINK ROD TO STATOF	1		
21	10	29722	SCREW, BRACKET TO STATOR	2		
22		59783	LINK, THROTTLE - STATOR ASSI	1		
23	12	30164	WASHER, THROTTLE LINK	1		
24		33973	SWIVEL, THROTTLE LINK	1		
25	11	45812	NUT, THROTTLE LINK	2		
26		56319A 3	LEAD ASSEMBLY, STOP SWITCH	1		
27		59060	BOOT, LEAD ASSEMBLY	1		
28		56757A 1	JUMPER WIRE ASSEMBLY, CONI	1		
29		56318A 6	LEAD ASSEMBLY, MODULE TO I	1		
30		56318A 5	LEAD ASSEMBLY, MODULE TO I	1		
31		38938	BOOT, LEAD ASSEMBLY	2		
32		56316A 3	CABLE ASSEMBLY, STATOR HOL	1		
32		56317A 4	CABLE ASSEMBLY< STATOR HO	1		
33		38938	BOOT, CABLE	2		
34	336	4460	INSULATOR, CABLE TO CONTAC	2		
35	11	56325	NUT, CABLE INSULATOR	2		