



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		74367A 3	LIGHTING STATOR ASSEMBLY	1	
2	10	30173	SCREW, LIGHTING STATOR ATT	2	
2	10	66707	SCREW, LIGHTING STATOR ATT	3	
3	19	75045	PLUG, BOTTOM COWL	1	
4		62351A 2	RECTIFIER ASSEMBLY	1	
5	10	25764	SCREW, RECTIFIER TO REAR BF	2	
6	23	62769	SPACER, RECTIFIER SCREW	2	
7	11	27164	NUT, RECTIFIER SCREW	2	
8	11	45076	NUT, RECTIFIER TERMINALS	3	
9	84	61393A 7	WIRE ASSEMBLY, RECTIFIER TC	1	
10	84	60466A16	WIRE ASSEMBLY, STARTER SOL	1	
11	84	60871A14	WIRE ASSEMBLY, CHOKE SOLE	1	
12	10	30663	SCREW, WIRE TO SWITCH BOX	1	
13	50	47216	STARTER MOTOR	1	SEE PAGE 26E, SECTION "E", FI
14	13	26992	LOCKWASHER, STARTER MOTO	1	
15	11	20088	NUT, STARTER MOTOR TERMIN	1	
16	11	20361	NUT, STARTER MOTOR STUDS	2	
17	54	47993	CLAMP, STARTER MOTOR FAST	1	
18	10	22483	SCREW, STARTER MOTOR CLA	1	
19	12	46897	WASHER, STARTER MOTOR CL	1	
20	11	20361	NUT, STARTER MOTOR CLAMP	1	
21	84	65063	CABLE, JUMPER - STARTER MO	1	
22		47886	SOLENOID, STARTER	1	
23	27	47829	GASKET, STARTER SOLENOID	1	
24	13	26996	LOCKWASHER, STARTER SOLE	1	
25	11	20645	NUT, STARTER SOLENOID TERM	2	
26	13	20202	LOCKWASHER, STARTER SOLE	2	
27	11	20083	NUT, STARTER SOLENOID TERM	2	
28	54	47830	CLAMP, NYLON - STARTER SOLE	2	
29	10	45862	SCREW, STARTER SOLENOID CL	2	
30	11	46438	NUT, STARTER SOLENOID CLAM	2	
31	84	74904	WIRING HARNESS, INTERNAL	1	
32	24	28975	SPRING, GARTER - INTERNAL W	1	
33	54	76368	CLAMP, INTERNAL WIRING HAR	1	
34	10	61802	SCREW, LEAD WIRE AND HARN	2	
35	54	33361	CLAMP, LEAD WIRE FASTENING	2	
36	54	23567	CLAMP, WIRING HARNESS TO C	1	
37	10	31206	SCREW, WIRING HARNESS CLAI	1	
38		22789	"D" WASHER, WIRING HARNESS	1	
39		47951	BRACKET, SUPPORT - EXTERNA	1	
40	10	26127	SCREW, WIRING HARNESS SUP	1	