



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	244	6193A 2	FLYWHEEL ASSEMBLY (MANUAL	1		
1	244	6118A 4	FLYWHEEL ASSEMBLY (ELECTR	1		
1	244	6118A 6	FLYWHEEL ASSEMBLY (BELGIU	1		
2	50	65721	RATCHET ASSEMBLY, FLYWHE	1		
3	28	20094	KEY, FLYWHEEL DRIVE	1		
4	12	65891	WASHER, FLYWHEEL NUT	1		
5	11	22339	NUT, FLYWHEEL	1		
6	3399	5209A 3	STATOR ASSEMBLY	1		
7	10	66707	SCREW, STATOR TO END CAP (3		
7	10	35400	SCREW, STATOR TO END CAP (3		
8	339	6119A 1	COIL ASSEMBLY (5 1/2" AND 6 3.	1		
8	339	6120A 1	COIL ASSEMBLY (1 3/4" AND 3 1.	1		
9	54	59538	CLIP, COIL RETAINING	2		
10	54	65927	CLIP, COIL RETAINING	2		
11	86	74474	TERMINAL BLOCK, STATOR	1		
12	10	20646	SCREW, TERMINAL BLOCK TO S	1		
13	11	46438	NUT, TERMINAL BLOCK SCREW	1		
14	10	22654	SCREW, LEADS TO TERMINAL B	1		
15		74324A 2	HOUSING, TRIGGER	1	(Serial No. 4403787 and Up)	
16		74454	SWIVEL, TRIGGER LINK	1		
17	12	30164	WASHER, THROTTLE LINK	1		
18		33973	SWIVEL, THROTTLE LINK	1		
19	11	45812	NUT, THROTTLE LINK	2		
20	339	5748A 2	COIL ASSEMBLY, IGNITION	2	(Serial No. 4403787 and Up)	
21	13	26996	LOCKWASHER, IGNITION COIL T	4		
22	11	45076	NUT, IGNITION COIL TERMINAL	4		
23		66355	COVER, IGNITION COIL	2		
24	10	72073	SCREW, COIL COVER TO REAR S	3		
25	11	20110	NUT, COIL COVER SCREW	3		
26		54676	RETAINER, HIGH TENSION LEA	1		
27	84	63212A 2	LEAD ASSEMBLY, HIGH TENSIO	2		
28	85	71006A 1	PROTECTOR ASSEMBLY, SPARK	2		
29	332	2854	NIPPLE, IGNITION COIL	2		
30	33	58194	SPARK PLUG (ACV#40FFK)	2	BELGIUM AND CANADA USE C	
31	339	6222A 1	SWITCH BOX ASSEMBLY	1		
32	10	48409	SCREW, SWITCH BOX TO PLATE	2		
33	12	56681	WASHER, SWITCH BOX SCREW	2		
34		75899	PLATE, SWITCH BOX	1		
35	10	69052	SCREW, SWITCH BOX PLATE AT	3		
36		61990	STA-STRAP	3		
37	10	46318	SCREW, SWITCH BOX LEADS (2	1		