



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		75349A 2	HOUSING ASSEMBLY, STARTER	1		
2	10	37562	SCREW	1	STARTER HOUSING TO CYLIND	
3	13	26993	LOCKWASHER	1	HOUSING TO CYLINDER BLOCK	
4	10	56500	SCREW	1	STARTER HOUSING TO CRANK	
4	10	69029	SCREW	1	STARTER HOUSING TO CRANK	
5	11	35888	NUT	2	STARTER HOUSING TO CRANK	
6		55860	PULLEY, STARTER CABLE (MANI	1		
7	10	37892	SCREW, PULLEY TO STARTER (	1		
8		53111	RETAINER, PULLEY SCRWE (MA	1		
9	23	30977	SPACER, PULLEY SCRW (MANU	1		
10	11	20110	NUT, PULLEY SCREW (MANUAL)	1		
11	11	20166	NUT, SHEAVE SHAFT (LEFT HAN	1	(MANUAL)	
12	14	61004	TAB WASHER, SHEAVE SHAFT (	1		
13		65890	RETAINER, STARTER SPRING (M	1		
14	23	28912	SPACER, SHEAVE SHAFT (MANU	1		
15	24	29340A 1	SPRING, STARTER REWIND (MA	1		
16		76321A 1	STARTER SJAIVE ASSEMBLY (MA	1		
17	13	36206	WASHER, WAVE - STARTER PAW	3		
18		30596	PAWL, STARTER (MANUAL)	3		
19	23	28919	BUSHING, NYLON - SHEAVE SHA	1		
20	23	61005	SPACER, SHEAVE SHAFT (MANU	1		
21		26179	RETAINER	1	STARTER SHEAVR TO PLATE (M	
22	12	35559	WASHER	1	STARTER SHEAVE RETAINER (	
22	12	35559	WASHER	1	STARTER SHEAVE RETAINER (	
23	13	20160	WASHER	1	WAVE - STARTER SHEAVE TEN	
24		30595	PLATE	1	RETAINER - STARTER PAWL/LEF	
25	12	57860	WASHER	1	WEAR - SHEAVE SHAFT (MANU.	
27		61003	SHAFT, SHEAVE (MANUAL)	1		
28		76300	BRACKET, MOUNTING - TOP COV	1		
29	10	37562	SCREW	2	REAR MOUNTING BRACKET TO	
30		57927	MOUNT, RUBBER - SUPPORT BF	3		
31	11	20361	NUT	6	RUBBER MOUNT TO SUPPORT	
32		46934A 1	GROUND WIRE ASSY, REAR BR	1		
32	57	76181	GROUND WIRE ASSY, REAR BR	1		
33	10	62568	SCREW	1	GROUND WIRE TO CYLINDER E	
34	10	69052	SCREW	1	GROUND WIRE TO CYLINDER E	
35		60299	RETAINER, HIGH TENSION WIR	2		
36	10	69079	SCREW	2	RETAINER TO REAR SUPPORT	
37		76097	BRACKET, MOUNTING - TOP COV	1		
38	10	37562	SCREW	2	FRONT MOUNTING BRACKET T	
38		60577	MOUNT, RUBBER, SUPPORT RE	4		