



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		66416A 2	PLATE ASSEMBLY, MOUNTING	1	UNITED STATES 5606491 AND I	
1		88381A 3	PLATE ASSEMBLY, MOUNTING	1	UNITED STATES 5606492 AND I	6
2	23	86215	BEARING, NYLON - WATER INL	1		
3	26	25329	SEAL, RUBBER - WATER INLET	1		11
4		33513	RETAINER, WATER INLET TUBE	1		
5	10	20540	SCREW, RETAINER TO MOUNTII	1		
6	27	39401	GASKET, POWERHEAD TO MOU	1		11
7		39622	SEAL, MOUNTING PLATE TO BO	1		
8	27	39402	GASKET	1	MOUNTING PLATE TO DRIVE SI	11
9	2129	6419A 2	BOTTOM COWL ASSEMBLY	1	UNITED STATES 4954680 AND I	
9	2129	7065A 2	BOTTOM COWL ASSEMBLY	1	UNITED STATES 4954681 AND I	
10		48472	COVER, HARNESS HOLE - MAN	1		
11	10	61802	SCREW, COVER TO BOTTOM C	2		
12	19	32297	PLUG, BOTTOM COWL (ELECTRI	1		
13		76176	LEVER, FRONT COVER	1		
14	24	76177	SPRING, FRONT COVER LEVER	1		
15	17	26541	ROLL PIN, LEVER TO BOTTOM C	1		
16		46266A 2	COVER PLATE ASSEMBLY, BOTI	1		
17		39591	PAD, SOUND - COVER PLATE	1		
18	10	62568	SCREW, COVER PLATE TO BOT	3		
20		78497	BOOT, THROTTLE CABLE - BOTI	1		
21		39778	BOOT, FUEL ADAPTOR - BOTTO	1		
22		39780	BOOT, SHIFT CABLE - BOTTOM C	1		
23		39058	SEAL, SHIFT HANDLE - BOTTOM	1		
24	32	34395A 1	HOSE	1	TELL TALE - -COWL TO CYLINDI	
25	22	25885	ELBOW	1	TELL TALE HOSE TO CYLINDEF	
26		52889	NOZZLE	1	TELL TALE HOSE TO BOTTOM C	
27	10	48409	SCREW	1	TELL TALE NOZZLE TO BOTTOI	
28	87	69508A 7	STOP SWITCH ASSEMBLY -MANI	1		
29	87	69509A 1	COVER ASSEMBLY, STOP SWITC	1		
30	13	69845	LOCKWASHER, STOP SWITCH -	1		
31	11	69844	NUT, STOP SWITCH -MANUAL	1		