



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	415	6099	CRANKSHAFT	1	UNITED STATES 5606491 AND I	
2	26	73315	SEAL, CRANKSHAFT	1	UNITED STATES 5606491 AND I	
1	415	7631A 1	CRANKSHAFT ASSEMBLY	1	UNITED STATES 5606492 AND I	6
3		88224A 1	CARRIER ASSEMBLY	1	UNITED STATES 5606492 AND I	6
4	12	88740	WASHER, FELT - CARRIER	1	UNITED STATES 5606492 AND I	1
5	534	3267A25	CENTER MAIN BEARING ASSEMBLY	1		
6	17	20032	DOWEL PIN, CENTER MAIN BEARING	2		
7	17	65855	PIN, REED STOP	8		
8	10	45775	SCREW, CENTER MAIN BEARING	2		
9	11	45774	NUT, CENTER MAIN BEARING	2		
10	34	56704A 1	REED SET, CENTER MAIN BEARING	1		
11	34	64632	REED STOP, MAIN BEARING REED	4		
12	10	77280	SCREW, REED STOP MOUNTING	4		
13	11	20110	NUT, REED STOP MOUNTING SCREW	4		
14	17	20032	DOWEL PIN, MAIN BEARING TO	1		