



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		74367A 9	LIGHTING STATOR ASSEMBLY	1		
2	10	30173	SCREW, LIGHTING STATOR ATT	2		
2	10	66707	SCREW, LIGHTING STATOR ATT	3		
3		62351A 2	RECTIFIER ASSEMBLY	1		
4	10	48408	SCREW, RECTIFIER TO REAR BF	2		
5	23	62769	SPACER, RECTIFIER SCREW	2		
6	11	45076	NUT, RECTIFIER TERMINALS	3		
7	84	73539A 2	WIRE ASSEMBLY	1	SOLENOID TO STARTER MOTO	
8	10	62568	SCREW, WIRE TO SWITCH BOX	1		
9	89	76545	SOLENOID STARTER	1		
10	13	26396	LOCKWASHER	2	STARTER SOLENOID TERMINA	
11	11	68219	NUT, STARTER SOLENOID TERM	2		
12	13	26393	LOCKWASHER	2	STARTER SOLENOID TERMINA	
13	11	21908	NUT, STARTER SOLENOID TERM	2		
14	10	69052	SCREW, STARTER SOLENOID TI	2		
15	84	65773A 2	WIRE ASSEMBLY	1	STARTER SOLENOID TO GROU	
16	50	76275	STARTER MOTOR	1		
17	10	25503	SCREW, STARTER MOTOR TO C	2		
18	13	26993	LOCKWASHER, STARTER MOTO	2		
19	84	76295	WIRING HARNESS, INTERNAL	1		
20	24	28975	SPRING, GARTER-INTERNAL WI	1		
21	54	76368	CLAMP	1	INTERNAL WIRING HARNESS T	
22	10	61802	SCREW	2	LEAD WIRE AND HARNESS CLA	
23	54	33361	CLAMP	2	LEAD WIRE FASTENING TO HA	
24	54	23567	CLAMP	1	WIRING HARNESS TO CRANKC.	
25	10	69079	SCREW	1	WIRING HARNESS CLAMP FAST	
26		69205	"D" WASHER, WIRING HARNESS	1		
27		47951	BRACKET, SUPPORT-EXTERNAL	1		
28	10	36137	SCREW	1	WIRING HARNESS SUPPORT T	
29	12	24664	WASHER, WIRING HARNESS SU	1		
30	11	46887	NUT, WIRING HARNESS SUPPOI	1		
31		54293A 4	CHOKE SOLENOID	1		
32	10	47910	SCREW	2	SOLENOID TO FRONT COWL SL	
33	84	60871A14	WIRE ASSEMBLY	1	SOLENOID TO SWITCH BOX PL	
34	13	26396	LOCKWASHER, CHOKE SOLENO	1		
35	11	68219	NUT, CHOKE SELENOID TERMIN	1		
36		56074A10	PLUNGER ASSEMBLY, CHOKE SI	1		
37		65108	LWVER, CHOKE	1		
38	10	65109	SCREW, CHOKE LEVER TO CAR	1		
39		65107	LINK, CHOKE	1		
40	11	65110	NUT, LINK TO CHOKE LEVER	1		