



12563

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		892126A01	ADAPTOR PLATE KIT	1		
2	17	892228	PIN, Dowel	8		
3	19	896951	PLUG, (24mm)	1		
4	26	884462	SEAL, Water	2		
5	25	887930	O-RING	2		2,5
6	26	884461	OIL SEAL	1		2
7	21	884422A07	PRESSURE RELIEF VALVE, Oil P	1		
8		884457	CHAIN, Oil Pump Drive	1		
9	12	892491	WASHER	1		
10	11	892165	NUT	1		
11		884458T06	DRIVESHAFT, Oil Pump	1		
12	25	895791	O-RING	2		2
13		884456	SPROCKET, Driven	1		
14		884418A 1	TENSIONER ASSEMBLY, Oil Pum	1		
15		884446T04	OIL PUMP ASSEMBLY	1		
16	10	892455065	SCREW	5		
17		892335001	DEFLECTOR, Oil	1		
18	10	885525 16	SCREW, (M6 x 16)	2		
19		888819002	COwL DRAIN	2		
20	25	888163	GROMMET	1		
21	21	884477A01	CHECK VALVE ASSEMBLY	1		
22	22	885516004	FITTING, Dump	1		
23	25	846594	O-RING, (1.239 x .070)	1		2,5
24	10	885525 12	SCREW, (M6 x 12)	1		
25	32	884549	HOSE, Vent-Lower	1		
26	25	884546	GROMMET	1		
27		888523001	CLIP	1		
28	32	892240	HOSE, Fuel into Fuel Supply Modul	1		
29	25	884546	GROMMET	1		
30	27	889617001	GASKET	1		2,5
31	32	887755 1	HOSE, Fuel-Vent	1		
32		884545T01	VENT CANISTER ASSEMBLY	1		
33	54	853947	CLIP	1		
34		895775A01	VALVE ASSEMBLY, Fuel Line Purg	1		
35	25	884546	GROMMET	1		
-	27	880552A06	GASKET SET, Powerhead	1		
-	61	895247A06	POWERHEAD ASSEMBLY	1		