

NO IMAGE

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
0	91	880118 1	DDT CARTRIDGE	1		
0	84	822560A 5	EFI TEST HARNESS	1	(ELECTRICAL/IGNITION)	
0	84	825003A 1	HARNESS	1	(ELECTRICAL/IGNITION)	
0	91	823686A 2	IGNITION DIAGNOSTIC UNIT	1	(ELECTRICAL/IGNITION)	
0	91	99750A 1	MULTI METER/DVA TESTER	1	(ELECTRICAL/IGNITION)	
0	91	52024A 1	REMOTE STARTER SWITCH	1	(ELECTRICAL/IGNITION)	
0	91	59339	SERVICE TACHOMETER	1	(ELECTRICAL/IGNITION)	
0	91	850439T	SPARK GAP TESTER	1	(EIGHT CHAMBER)(ELECTRICAL)	
0	91	63998A 1	SPARK GAP TESTER	1	(SINGLE CHAMBER)(ELECTRICAL)	
0	91	825824A 2	TACH INTERFACE MODULE	1	(ELECTRICAL/IGNITION)	
0	91	99379	TIMING LIGHT	1	(ELECTRICAL/IGNITION)	
0	91	11230 1	ALIGNMENT TOOL	1	(TRIM/TILT SYSTEM)	
0	91	99750A 1	MULTI-METER DVA TESTER	1	(TRIM/TILT SYSTEM)	
0	91	52915A 6	POWER TRIM TEST GAUGE KIT	1	(TRIM/TILT SYSTEM)	
0	91	74951	SPANNER WRENCH	1	(TRIM/TILT SYSTEM)	
0	91	44487T 1	TRIM ROD GUIDE REMOVER TO	1	(TRIM/TILT SYSTEM)	
0	91	44486A 1	TRIM ROD REMOVAL TOOL	1	(TRIM/TILT SYSTEM)	
0	91	55919	DRIVER HEAD	1	(POWERHEAD)	
0	91	52344	FLYWHEEL HOLDER	1	(POWERHEAD)	
0	91	849154T 1	FLYWHEEL PULLER	1	(POWERHEAD)	
0	91	90455T	LIFTING EYE	1	(POWERHEAD)	
0	91	93004A 2	LOCK RING INSTALLATION TOOL	1	(POWERHEAD)	
0	91	52952T 1	LOCK RING REMOVAL TOOL	1	(POWERHEAD)	
0	91	24697	PISTON RING EXPANDER	1	(POWERHEAD)	
0	91	92973A 1	PISTON PIN TOOL	1	(POWERHEAD)	
0	91	812549T	POWERHEAD STAND	1	(POWERHEAD)	
0	91	24161	PROTECTOR CAP-FLYWHEEL	1	(POWERHEAD)	
0	91	823237T	RING COMPRESSOR	1	(POWERHEAD)	
0	91	66274	TORQUE WRENCH	1	(0-150 lb in)(POWERHEAD)	
0	91	37241	UNIVERSAL PULLER PLATE	1	(POWERHEAD)	
0	91	852087A 3	DUAL FUEL/AIR PRESSURE GAL	1	(DFI)	
0	10	40073 25	SCREW (M5 x 25)	1	(DFI)	
0	91	851980 2	SEAL/TEFLON RING INSTALLATI	1	(DFI)	
0	91	851980 3	SEAL/TEFLON RING SIZING TOC	1	(DFI)	
0	91	881833A 2	SINGLE FUEL/AIR PRESSURE G	1	(DFI)	
0	91	99750A 1	VOLT/OHM METER	1	(DFI)	
0	91	53459	BACKLASH INDICATOR ROD	1	(GEAR HOUSING)	
0	91	78473	BACKLASH INDICATOR TOOL	1	(GEAR HOUSING)	
0	91	816244	BEARING DRIVER	1	(GEAR HOUSING)	
0	91	31106T	BEARING DRIVER CUP	1	(GEAR HOUSING)	
0	91	14211A 2	BEARING PRELOAD TOOL	1	(GEAR HOUSING)	