



232R

Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		844144T01	FUEL RAIL, (Port)	1	
2		844145T01	FUEL RAIL, (Starboard)	1	
3	54	804830	CLAMP	4	
4	10	804525001	SCREW PACKAGE, (2 Per)	11	
5		883542	VALVE ASSEMBLY	2	
6	25	804840	O-RING KIT	1	
7	22	805515	CAP, Brass	2	
8	19	804835	PLUG	1	
9	54	880816	CLAMP	1	
10	54	804831	CLAMP	4	
11		804528	INJECTOR	6	
12	25	804530	O-RING KIT	1	
13	25	804529	O-RING KIT	1	
14		804522	CLAMP	2	
15		804532	O-RING KIT	1	(16 PER KIT)
16	54	804832	CLAMP	2	
17		804526	SCREW PACKAGE, (2 Per) (M5 x 4)	4	
18		804535001	COVER	1	
19	24	804534001	SPRING	1	
20		804533	DIAPHRAGM ASSEMBLY	1	
21	25	804536	O-RING	1	
22	22	804836	FITTING	1	
23	32	804827	HOSE	1	
24	32	889310	HOSE, Fuel Supply	1	
25	32	889311	HOSE, Fuel By-Pass	1	
NS	25	804840	O-RING KIT	1	
26	26	888852	SEAL, Fuel Director	1	
27		884595A01	AIR INJECTOR	6	
28	26	804875	SEAL KIT	1	
29	12	828634A	WASHER ASSEMBLY, Cupped	6	SN# 1B226999 & Below
29	12	859404002	WASHER, Injection	6	SN# 1B227000 & Up
30		828791	CLIP	4	
31	16	858778	STUD, (M10 x 91)	4	
32	11	826292	NUT, (M10)	4	
33	54	856880	CLAMP, (15.3)	1	