



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1623	822442A25	GEAR HOUSING	1	(BASIC-BLACK)	
1	1623	822442A26	GEAR HOUSING	1	(BASIC-GRAY) WHEN EXISTING	
43		823903	SHIFT CRANK	1		
44		818349A 1	SHIFT SPOOL KIT	1		
45	15	47397A 1	SHIM	AR		5
46		815362A 1	BEARING ADAPTOR ASSEMBLY	1	(1623-822442C2 CASTING)	
46		828830A 2	BEARING ADAPTOR ASSEMBLY	1	(1623-822442C3 CASTING)	
47	31	814653	ROLLER BEARING	1		
48	12	815481	THRUST WASHER	1		
49	31	815480	THRUST BEARING	1		
50	43	826288A 1	REVERSE GEAR	1	(1.75:1 GEAR RATIO - 12/21)	
50	43	824700A 1	REVERSE GEAR	1	(1.64:1 GEAR RATIO - 17/28)	
50		NSS	REVERSE GEAR	1	(1.62:1 GEAR RATIO - 13/21)	14
51	31	815482	ROLLER BEARING	1		
52	24	30893	SPRING	1		
53	52	824112	SLIDING CLUTCH	1		
54	17	30632	CROSS PIN	1		
55	17	78909	DETENT PIN	1		
56	44	824111	PROPELLER SHAFT	1		
57	43	826287A 1	FORWARD GEAR (INCLUDES PIN	1	(1.75:1 GEAR RATIO - 12/21)	
57	43	828289A 3	FORWARD GEAR (INCLUDES PIN	1	(NOTE: THIS COMPLETE GEAR	
58	23	17615 14	SPACER SHIM .206 IN.	AR		5
58	23	17615 15	SPACER SHIM .208 IN.	AR		5
58	23	17615 16	SPACER SHIM .210 IN.	AR		5
58	23	17615 17	SPACER SHIM .212 IN.	AR		5
58	23	17615 18	SPACER SHIM .214 IN.	AR		5
58	23	17615 19	SPACER SHIM .216 IN.	AR		5
58	23	17615 20	SPACER SHIM .218 IN.	AR		5
58	23	17615 21	SPACER SHIM .220 IN.	AR		5
58	23	17615 22	SPACER SHIM .222 IN.	AR		5
58	23	17615 23	SPACER SHIM .224 IN.	AR		5
58	23	17615 24	SPACER SHIM .226 IN.	AR		5
58	23	17615 25	SPACER SHIM .228 IN.	AR		5
58	23	17615 26	SPACER SHIM .230 IN.	AR		5