



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	258	8274A 6	FLYWHEEL ASSEMBLY	1		
2	10	97359A 1	SCREW, FLYWHEEL TO CRANKS	1		
3	12	86496	WASHER, FLYWHEEL SCREW	1		
4	43	87575	RING GEAR, FLYWHEEL	1	ELECTRIC UNITED STATES 60°	
4	43	99301	RING GEAR, FLYWHEEL	1	ELECTRIC UNITED STATES 60°	
5	10	40039106	SCREW, RING GEAR TO FLYWHI	4	-ELECTRIC	
6	464	8586A 2	CRANKSHAFT ASSEMBLY	1		
7		85981	SEAL, CRANKSHAFT	1		8
8	26	85107	OIL SEAL, CRANKSHAFT -LOWE	1		
9	31	85113	ROLLER BEARING, CRANKSHAF	1		
10	31	85114	ROLLER BEARING, CRANKSHAF	1		
11	26	85974	OIL SEAL, CRANKSHAFT -UPPEF	1		
12		86992A 2	BEARING ASSEMBLY, CENTER M	1		
13	28	20094	KEY, FLYWHEEL DRIVE	1		
14	767	8511A 3	PISTON AND PIN ASSEMBLY	2		
15	40	47276	LOCK RING, PISTON PIN	4		
16	39	96525A12	PISTON RING ASSEMBLY	1		
17	630	8329A 2	CONNECTING ROD ASSEMBLY	2	UNITED STATES 6241936 AND I	
18	29	20063	NEEDLE BEARING, PISTON EN	54	UNITED STATES 6241936 AND I	
19	12	85175	WASHER, LOCATING - NEEDLE	4	UNITED STATES 6241936 AND I	
20	31	91866A 1	ROLLER BEARING ASSEMBLY	2	UNITED STATES 6241936 AND I	
21	10	86224	SCREW, CONNECTING ROD (2	4	UNITED STATES 6241936 AND I	
17	630	8329A 3	CONNECTING ROD ASSEMBLY	2	UNITED STATES 6241937 AND I	
18	29	98295	NEEDLE BEARING, PISTON EN	54	UNITED STATES 6241937 AND I	
19	12	98296	WASHER, LOCATING - NEEDLE	4	UNITED STATES 6241937 AND I	
20	31	91866A 1	ROLLER BEARING ASSEMBLY	2	UNITED STATES 6241937 AND I	
21	10	40082 25	SCREW,CONNECTING ROD (2E	4	UNITED STATES 6241937 AND I	