



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2177	8531A 6	TOP COWL ASSEMBLY	1		
2		89584	HINGE, COWL LATCH	1		
3	10	22028	SCREW, HINGE TO TOP COWL	2		
4	11	27164	NUT, HINGE PIN	2		
5		91059	BLANKET, TOP COWL	1	NOT USED ON LATER ENGINES	
6		91061	BLANKET, TOP COWL	1	NOT USED ON LATER ENGINES	
7		91060	BLANKET, TOP COWL	1	NOT USED ON LATER ENGINES	
8	2176	8301A 3	BOTTOM COWL ASSEMBLY, POF	1		
9	25	89695	GROMMET, FUEL ADAPTOR (1- OPT			6
9	25	93770	GROMMET, FUEL ADAPTOR (2- OPT			6
10	17	89010	ROLL PIN, BOTTOM COWL	AR		5
11		42274	SEAL, BOTTOM COWL	2		
12		89009	LATCH, BOTTOM COWL	1		
13	10	40003 30	SCREW, LATCH TO BOTTOM CO	1		
14	11	40026 4	NUT, LATCH SCREW	1		
15	2176	8306A 1	BOTTOM COWL ASSEMBLY, STA	1		
16	25	87819	GROMMET, BOTTOM COWL	OPT	(3/4" X 2-1/4" OPENING)	6
16	25	96160	GROMMET, BOTTOM COWL	OPT	(1-1/8" X 3-1/8" OPENING)	6
16	25	93527	GROMMET, BOTTOM COWL	OPT	(1-1/8" X 2-1/8" OPENING)	6
17	25	89696	GROMMET, CHOKE KNOB	1		
18		85982	PLATE, BOTTOM COWL	2		
19	10	75710	SCREW, PLATE TO BOTTOM CO	8		
20		87308	BRACKET, COWL LATCH	1		
21	10	40001 8	SCREW, BRACKET TO BOTTOM	2		
22	17	25870	ROLL PIN, LINK	2		
23		89583	LINK, COWL LATCH	1		
24		89582	LATCH, COWL - REAR	1		
25	12	29245	WASHER, LATCH SCREW	1		