

NO IMAGE

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		FT2991	BRUSH-WIRE-CARBON REMOVE	1		
-	91	24697	EXPANDER-PISTON RINGS	1		
-		FT2909	KNOCK OFF NUT-FLYWHEEL REI	1		
-		FT2989	WEDGE-FLYWHEEL REMOVAL	1		
-	91	13663A	PISTON PIN TOOL	1		
-		FT2990	PISTON PIN BLOCK	1		
-		FT8950	LEAKAGE TESTER-GEAR HOUSII	1		
-	91	37241	PULLER PLATE-GEAR HOUSING	1		
-	91	34569A	PULLER ASSEMBLY-SLIDE HAMP	1		
-	91	93843	BEARING CARRIER TOOL-GEAR	1		
-	91	27780	BEARING PULLER-GEAR HOUSIN	1		
-	91	31229A	PULLER & INSTALLATION KIT-BE	1		
-	91	36571	WRENCH-DRIVESHAFT BEARIN	1		
-	91	29310	PLATE	1		
-	91	31229	SHAFT	1		
-	11	24156	NUT (.625-18)	1		
-	12	34961	WASHER (.656 X 1.312 X .095)	1		
-	91	850439T	AIR GAP TOOL-AIR GAP SETTING	1		
-	91	850439	SPARK TESTER-IGNITION SYSTEM	1		
-	91	99379	TIMING LIGHT-IGNITION SYSTEM	1		
-	91	59339	TACH/DWELL METER-TIMING	1		
-	91	99750A	MULTIMETER TESTER-ELECTRII	1		
-	92	825265A	COMPOUND (8 OZ.)-NEEDLE BEA	1		
-	92	FT2987	LUBRICANT-ANTI SEEZ	1		
-	92	90113	SEALANT-RTV #1473	2		
-	92	809825	SEALANT-LOCTITE 587	1		
-		FT2962	SEALANT-LOCTITE H	2		
-	92	809819	SEALANT-LOCTITE 27121	1		
-	92	809820	SEALANT-LOCTITE 27131 (50ML)	1		
-	92	850736A	MULTI LUBE 2 4 C (8 OZ.)	1		
-	92	850737A	GEAR LUBE (10 OZ.)	1		
-	92	816391A	GREASE	4		