



5763

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	91	853996	FLYWHEEL PULLER ASSEMBLY	1		
2	91	853996	PISTON PIN TOOL	1		
3	91	853996	MOUNT RUBBER PULLER KIT	1		
4	91	853996	TOOL (For Removing)	1		
5	91	853996	TOOL (For Replacing)	1		
6	91	853996	WRENCH TOOL	1		
7	91	853996	SOCKET-BEVEL GEAR B NUT	1		
8	91	853996	CLUTCH PIN SNAP TOOL	1		
9	91	853996	BEVEL GEAR BEARING PULLER	1		
10	91	853996	BACKLASH MEASURING TOOL	1		
11	91	853996	PULLER KIT, Needle Roller Bearin	1		
12	91	803133	FLANGE	1		
13	91	803133	SHAFT	1		
14	12	16140	WASHER	1		
15	11	853722	NUT	1		
16	91	803133	FLANGE	1		
17	91	803133	GUIDE TOOL	1		
-	91	24697	EXPANDER TOOL	1	(Not Shown)	
-	91	895212	TOOL, Bearing Outer Press Rod	1	(Not Shown)	
-	91	895213001	TOOL, Bearing Outer Press Plate	1	(Not Shown)	
-	91	895214	TOOL, Bearing Outer Press Guide	1	(Not Shown)	
-	91	895215	TOOL, Bevel Gear A Set	1	(Not Shown)	
-	91	895216004	TOOL, Backlash Measuring Collar	1	(Not Shown)	
-	91	895217	TOOL, Conedisk Spring, D-12	1	(Not Shown)	
-	91	895218	TOOL, Shimming Gauge	1	(Not Shown)	
-	91	895219	TOOL, Thickness Gauge	1	(Not Shown)	
-	91	804552001	TOOL, Flywheel Puller	1	(Not Shown)	
-	91	895220	TOOL, Flywheel Stripper	1	(Not Shown)	