



| Parts List | | | | | | |
|------------|-------|----------|-------------------------------|-----|---------------------------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | 2177 | 8531A 6 | TOP COWL ASSEMBLY | 1 | | |
| 2 | | 89584 | HINGE, COWL LATCH | 1 | | |
| 3 | 10 | 22028 | SCREW, HINGE TO TOP COWL | 2 | | |
| 4 | 11 | 27164 | NUT, HINGE PIN | 2 | | |
| 5 | | 91059 | BLANKET, TOP COWL | 1 | NOT USED ON LATER ENGINES | |
| 6 | | 91061 | BLANKET, TOP COWL | 1 | NOT USED ON LATER ENGINES | |
| 7 | | 91060 | BLANKET, TOP COWL | 1 | NOT USED ON LATER ENGINES | |
| 8 | 2176 | 8301A 3 | BOTTOM COWL ASSEMBLY, POF | 1 | | |
| 9 | 25 | 89695 | GROMMET, FUEL ADAPTOR (1- OPT | | | 6 |
| 9 | 25 | 93770 | GROMMET, FUEL ADAPTOR (2- OPT | | | 6 |
| 10 | 17 | 89010 | ROLL PIN, BOTTOM COWL | AR | | 5 |
| 11 | | 42274 | SEAL, BOTTOM COWL | 2 | | |
| 12 | | 89009 | LATCH, BOTTOM COWL | 1 | | |
| 13 | 10 | 40003 30 | SCREW, LATCH TO BOTTOM CO | 1 | | |
| 14 | 11 | 40026 4 | NUT, LATCH SCREW | 1 | | |
| 15 | 2176 | 8306A 1 | BOTTOM COWL ASSEMBLY, STA | 1 | | |
| 16 | 25 | 87819 | GROMMET, BOTTOM COWL | OPT | (3/4" X 2-1/4" OPENING) | 6 |
| 16 | 25 | 96160 | GROMMET, BOTTOM COWL | OPT | (1-1/8" X 3-1/8" OPENING) | 6 |
| 16 | 25 | 93527 | GROMMET, BOTTOM COWL | OPT | (1-1/8" X 2-1/8" OPENING) | 6 |
| 17 | 25 | 89696 | GROMMET, CHOKE KNOB | 1 | | |
| 18 | | 85982 | PLATE, BOTTOM COWL | 2 | | |
| 19 | 10 | 75710 | SCREW, PLATE TO BOTTOM CO | 8 | | |
| 20 | | 87308 | BRACKET, COWL LATCH | 1 | | |
| 21 | 10 | 40001 8 | SCREW, BRACKET TO BOTTOM | 2 | | |
| 22 | 17 | 25870 | ROLL PIN, LINK | 2 | | |
| 23 | | 89583 | LINK, COWL LATCH | 1 | | |
| 24 | | 89582 | LATCH, COWL - REAR | 1 | | |
| 25 | 12 | 29245 | WASHER, LATCH SCREW | 1 | | |