



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		F681408 1	HOUSING-STARTER	1	
2	37	825149A 1	DECAL KIT-SHIFT TO NEUTRAL	1	
3	10	90192	SCREW (.250-20 X .750)	3	
4	23	F681405T	INSERT-STARTER HOUSING	3	
5		F681428	INSERT-ROPE-STARTER HOUSING	1	
6	53	818853	RING-RETAINING	1	
7		819245T	BRACKET-STARTER HOUSING-F	1	2
8	11	814101	NUT (.250-20)	1	
9	10	98254	SCREW (.250-20 X .625)	3	2
10	24	F681970	SPRING-STARTER REWIND	1	
11		42034A 2	PULLEY ASSEMBLY-STARTER R	1	
12	19	817362	PLUG-PULLEY	1	
13	26	12494 1	SEAL-PULLEY BEARING	1	
14		F681232	ROPE (64.00/67.00 IN.)	1	
15		F681592	RETAINER-STARTER PULLEY	3	
16	10	48408	SCREW (#10-16 X .500)	3	
17	10	819625	SCREW-SHOULDER	2	
18		FA681630T	SUPPORT ASSEMBLY-HANDLE	1	
19		830282 1	PLATE-HANDLE SUPPORT	1	
20		F681874 1	FASTENER-HANDLE SUPPORT F	1	
21	10	F2210	SCREW (.250-14 X .500)	2	
22		F681132	HANDLE-ROPE	1	
23		F681817	RETAINER-ROPE HANDLE	1	
-	800	819240A 3	POWERHEAD ASSEMBLY	1	