



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-	1665	8669A 3	GEAR HOUSING ASSEMBLY,COM	1		
-	1665	8669A 4	GEAR HOUSING ASSEMBLY,COM	1		
1	1665	8669A 2	GEAR HOUSING ASSEMBLY	1		
39		44138	TRIM TAB	1		
40	10	40003 55	SCREW,TRIM TAB(35MM)	1		
41	12	70132	WASHER,TRIM TAB SCREW	1		
42	31	99328A 1	ROLLER BEARING ASSEMBLY	1		
43	43	44213A 1	FORWARD GEAR	1		
44	23	85557	BUSHING,FORWARD GEAR	1		
45		85094	CAM FOLLOWER	1		
46	24	38114	SPRING,RETAINING-CROSS PIN	1		
47	52	41040	CLUTCH,SLIDING	1		
48	17	85093	CROSS PIN,CLUTCH TO PROPE	1		
49	24	88680	SPRING,COMPRESSION-PROPE	1		
50	44	99740	PROPELLER SHAFT	1		
51	43	99542	REVERSE GEAR	1		
52		99906A 1	BEARING CARRIER ASSEMBLY	1		
53	31	21739	ROLLER BEARING	1		
54	26	41132	OIL SEAL,BEARING CARRIER	1		
55	26	41131	OIL SEAL,BEARING CARRIER	1		
56	25	85549	"O" RING,BEARING CARRIER	1		2
57		87293	PLATE,GEAR HOUSING	1		
58	10	91909	SCREW,COVER TO GEAR HOU	3		
59		85128A 1	THRUST HUB ASSEMBLY,PROPE	1		
60	48	86848A 4	PROPELLER ASSEMBLY	1		
61	11	88228	PROPELLER NUT	1		
62	10	43215	SCREW,GEAR HOUSING(25MM)	4		
63	12	43328	WASHER,GEAR HOUSING SCRE	4		
64	23	41589	SPACER,GEAR HOUSING SCRE	4		