



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		892126A01	ADAPTOR PLATE KIT	1	
2	17	892228	PIN, Dowel	8	
3	19	881855001	PLUG	1	
4	12	881856001	WASHER	1	
5	25	887930	O-RING	2	2,5
6	26	884461	OIL SEAL	1	2
7	26	884462	SEAL, Water	2	2
8		884457	CHAIN, Oil Pump Drive	1	
9	12	892491	WASHER	1	
10	11	892165	NUT	1	
11		884458T06	DRIVESHAFT, Oil Pump, Oil Pump	1	
12	25	895791	O-RING	2	2
13		884456	SPROCKET, Driven	1	
14		884418A 1	TENSIONER ASSEMBLY, Oil Pump	1	
15		884446T04	OIL PUMP ASSEMBLY	1	
16	10	892455065	SCREW	5	
17		892335	OIL DEFLECTOR	1	
18	10	885525 16	SCREW, (M6 x 16)	2	
19		888819002	COWL DRAIN	2	
20	25	888163	GROMMET	1	
21	21	884477A01	CHECK VALVE ASSEMBLY	1	
22	22	885516004	FITTING, Dump	1	
23	25	846594	O-RING, (1.239 x .070)	1	2,5
24	10	885525 12	SCREW, (M6 x 12)	1	
25	32	884549	HOSE, Vent-Lower	1	
26	25	884546	GROMMET	1	
27		888523001	CLIP	1	
28	32	892240	HOSE, Fuel into Fuel Supply Modul	1	
29	25	884546	GROMMET	1	
30	27	889617001	GASKET	1	2,5
31	32	887755 1	HOSE, Fuel-Vent	1	
32		884545T	VENT CANISTER	1	SN# 1B073682 & Below
32		884545T02	VENT CANISTER ASSEMBLY	1	SN# 1B073683 & Up
33	54	853947	CLIP	1	
34		895775A01	VALVE ASSEMBLY, Fuel Line Purg	1	
35	25	884546	GROMMET	1	
36	21	884422A07	PRESSURE RELIEF VALVE, Oil P	1	
-	27	880552A05	GASKET SET, Powerhead	1	
-	61	895247A05	POWERHEAD ASSEMBLY	1	