



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2177	8869A 8	TOP COWL ASSEMBLY	1		1
2		43515	HINGE, COWL LATCH	1		
3		43555	BRACKET, TOP COWL	1		
4	10	40001 8	SCREW, HINGE TO TOP COWL	4		
5	2176	9107A 2	BOTTOM COWL ASSEMBLY COW	1		1
6	2176	9108A 1	BOTTOM COWL ASSEMBLY, STA	1		1
7		85982	PLATE, BOTTOM COWL	2		
8	10	70332	SCREW, PLATE TO BOTTOM C	8		
9		15067A 1	SEAL, BOTTOM COWL	2		
10		43514	LATCH, BOTTOM COWL	1		
11	10	40001 8	SCREW, LATCH TO BOTTOM CO	2		
12		43554A 5	LATCH, COWL-REAR	1		
13	10	40001 8	SCREW, BRACKET TO BOTTOM	2		
14		11281	COVER, FUEL INLET	1		
15	25	41604	PLATE, BOTTOM COWL (WITHO	1		
16	25	41604 1	PLATE, BOTTOM COWL - WITH	1		
17	87	11083A 6	STOP SWITCH ASSEMBLY - WIT	1		
18		12044	RETANER, STOP SWITCH - WI	1		
18		15920A54	LANYARD ASSEMBLY - WITH S	1		