



IGNITION COMPONENTS

| Parts List | | | | | | |
|------------|-------|----------|------------------------------|-----|---------------------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | 84 | 88891A | HARNESS ASSEMBLY, PRIMARY | 1 | (W/NUT CONNECTIONS) | |
| 2 | | 86617A | STATOR ASSEMBLY | 1 | | |
| 3 | 10 | 40001 | SCREW, STATOR ATTACHING (2) | 2 | | |
| 3 | 10 | 40001 | SCREW, STATOR ATTACHING (1) | 2 | | |
| 6 | | 98450A | TRIGGER ASSEMBLY | 1 | | |
| 7 | 54 | 24836 | CLIP, TRIGGER LEADS | 1 | | |
| 8 | 10 | 77137 | TO CRANKCASE | 1 | | |
| 9 | | 69205 | "C" WASHER, CLIP SCREW | 1 | | |
| 10 | 339 | 7370A | IGNITION COIL ASSEMBLY | 2 | | |
| 11 | | 99762 | COVER, IGNITION COIL | 1 | | |
| 12 | 10 | 40007 | SCREW, IGNITION COIL COVER | 3 | | |
| 13 | 11 | 45076 | NUT, COIL TERMINAL | 4 | | |
| 14 | 84 | 99215A | LEAD ASSEMBLY, HIGH TENSION | 2 | | |
| 15 | 85 | 63709A | BOOT ASSEMBLY, SPARK PLUG | 2 | | |
| 16 | 33 | 97180 | SPARK PLUG | 2 | | |
| 16 | 33 | 14103570 | SPARK PLUG (CANADA AND BEL) | 2 | | |
| 17 | 339 | 7452A | SWITCH BOX (WITH NUT CONNE) | 1 | | |
| 18 | 339 | 7452A | SWITCH BOX (WITH BULLET COI) | 1 | | |
| 19 | 10 | 40057 | SCREW, SWITCH BOX TO CYLIN | 3 | | |
| 20 | 11 | 45076 | NUT, SWITCH BOX TERMINALS | 6 | | |
| 21 | 84 | 88807A | WIRE ASSEMBLY, GROUND | 2 | | |
| 22 | 10 | 43394 | SCREW, GROUND WIRE | 1 | | |
| 23 | | 86704A | STATOR ASSEMBLY, AUXILIARY | 1 | | |
| 24 | 10 | 40001 | SCREW, STATOR ATTACHING M | 3 | | |
| 25 | 86 | 63813 | TERMINAL BLOCK MARINER | 1 | | |
| 26 | 10 | 48409 | SCREW, TERMINAL BLOCK MAR | 2 | | |