



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		62351A 2	RECTIFIER ASSEMBLY	1		
2	10	48409	SCREW, RECTIFIER TO CYLINDE	2		
3	11	45076	NUT, RECTIFIER TERMINALS	3		
4	89	96054	STARTER SOLENOID	1		
5	10	40001 68	SCREW	2	STARTER SOLENOID TO CRANI	
6	11	26419	NUT, STARTER SOLENOID TERM	2		
7	11	64015	NUT, STARTER SOLENOID TERM	2		
8	84	88809A 5	WIRE ASSEMBLY, YELLOW	1		
9	84	88439A 8	BATTERY WIRE ASSEMBLY, REC	1		
9	84	88439A 6	BATTERY WIRE ASSEMBLY, BLA	1		
10	84	92436A 5	WIRING HARNESS ASSEMBLY, E	1		
11	88	95085	FUSE	1		
12		92439	BRACKET, WIRING HARNESS	1		
13	10	40003 27	SCREW, BRACKET	1		
14	11	40063 4	NUT, BRACKET SCREW	1		
15	54	32523	CLAMP, WIRING HARNESS	1		
16	54	55098	CLAMP, WIRING HARNESS	1		
17		86704A 2	STATOR ASSEMBLY, AUXILIARY	1		
18	10	40001 23	SCREW, STATOR ATTACHING (3	3		
19	50	90983A 1	STARTER MOTOR ASSEMBLY	1		
20		96561	DRIVE KIT	1		
21		96562	DRIVE	1		
22		96563	END CAP	1		
23		96565	ARMATURE	1		
24		96564	END CAP	1	CUMMUTATOR W/SPRINGS AN	
25	10	96566	THRU BOLT	1		
26	10	42125	SCREW, STARTER MOTOR ATT	2		
27	25	41604 2	PLATE, BOTTOM COWL (MERCU	1		
27	25	41604 4	PLATE, BOTTOM COWL (MARINE	1		
28	25	93527	GROMMET, BOTTOM COWL (RUI	1		