



IGNITION COMPONENTS

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	88891A	HARNESS ASSEMBLY, PRIMARY	1	(W/NUT CONNECTIONS)	
2		86617A	STATOR ASSEMBLY	1		
3	10	40001	SCREW, STATOR ATTACHING (2)	2		
4	10	40001	SCREW, STATOR ATTACHING (1)	2		
6		98450A	TRIGGER ASSEMBLY	1		
7	54	24836	CLIP, TRIGGER LEADS	1		
8	10	77137	TO CRANKCASE	1		
9		69205	"C" WASHER, CLIP SCREW	1		
10	339	7370A	IGNITION COIL ASSEMBLY	2		
11		99762	COVER, IGNITION COIL	1		
12	10	40007	SCREW, IGNITION COIL COVER	3		
13	11	45076	NUT, COIL TERMINAL	4		
14	84	99215A	LEAD ASSEMBLY, HIGH TENSION	2		
15	85	63709A	BOOT ASSEMBLY, SPARK PLUG	2		
16	33	97180	SPARK PLUG	2		
17	339	14103570	SPARK PLUG (CANADA AND BEL)	2		
18	339	7452A	SWITCH BOX (WITH NUT CONNE)	1		
19	339	7452A	SWITCH BOX (WITH BULLET COI)	1		
20	10	40057	SCREW, SWITCH BOX TO CYLIN	3		
21	11	45076	NUT, SWITCH BOX TERMINALS	6		
22	84	88807A	WIRE ASSEMBLY, GROUND	2		
23	10	43394	SCREW, GROUND WIRE	1		
24		86704A	STATOR ASSEMBLY, AUXILIARY	1		
25	10	40001	SCREW, STATOR ATTACHING M	3		
26	86	63813	TERMINAL BLOCK MARINER	1		
27	10	48409	SCREW, TERMINAL BLOCK MAR	2		