



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		42712A 1	HOUSING, STARTER	1		
2		86971	COVER, STARTER HOUSING	1		
3		94019	LEVER, LOCK (UPPER)	1		
4	24	12734	SPRING, UPPER LOCK LEVER	1		
5		93876 1	LEVER, LOCK (LOWER)	1		
6	10	92799	SCREW, LOWER LOCK LEVER	1		
7	17	38489	ROLL PIN, LOCK LEVER	1		
8	110	40001 74	SCREW, STARTER HOUSING AT	2		
8	10	40001 83	SCREW, STARTER HOUSING AT	1		
9		90478	PAD, FELT	1		
10	24	86857	SPRING, STARTER	1		
11	50	42566	SHEAVE, STARTER	1		
12	24	86851	SPRING, CAM	2		
13		86850	CAM	2		
14	53	86849	RETAINING RING, CAM	2		
15	50	12066A 9	ROPE, STARTER	1		
16		85174A 1	HANDLE ASSEMBLY, STARTER	1		
17	24	86852	SPRING, CAM	1		
18		86853	CAM	1		
19	10	97516	SCREW, CAM TO STARTER SHE.	1		
20		42626	SUPPORT, STARTER HANDLE	1		
21	10	40057111	SCREW, SUPPORT TO STARTER	2		
22	12	40022 13	WASHER, SUPPORT SCREW	2		
23	23	30977	SPACER, SUPPORT SCREW	4		
24	11	40063 3	NUT, SUPPORT SCREW	2		