



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
0	91	31229A 7	BEARING REMOVAL AND INSTAL	1		
0	91	37312T	DRIVER HEAD	1		
0	91	37323	DRIVER ROD	1		
0	91	38628T	INSTALLER TOOL, Bearing	1		
0		NSS	NOT SOLD SEPARATE, Collet Jaw	1		
0		NSS	NOT SOLD SEPARATE, Collet Jaw	1		
0		NSS	NOT SOLD SEPARATE, Expanding	1		
0		NSS	NOT SOLD SEPARATE, Expanding	1		
0	91	83163M	FLYWHEEL HOLDER	1		
0	91	83164M	FLYWHEEL PULLER	1		
0	91	804761001	TOOL, Flywheel Puller (2 HP)	1		
0	12	37429	WASHER	1		
0	91	24697	EXPANDER TOOL	1		
0	91	29287	GAUGE TOOL	1		
0	91	34569A 1	SLIDE HAMMER	1		
0	91	850439T 1	TESTER (Eight Chamber)	1		
0	91	63998A 1	GAP TOOL (Single Chamber)	1		
0	91	66274	TORQUE WRENCH, (0-150 lb-in)	1		
0	91	37241	PULLER PLATE	1		

NO IMAGE