



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	1580	8526A 1	DRIVE SHAFT HOUSING ASSEMBLY	1	
2	16	68927	STUD, DRIVE SHAFT HOUSING	1	
3	16	75321	STUD, DRIVE SHAFT HOUSING	1	
4	10	79953	SCREW, GREASE FILLER	1	
5	12	20260	WASHER, GREASE FILLER SCF	1	
6	32	88996	WATER TUBE (SHORT SHAFT)	1	
7	32	88997	WATER TUBE (LONG SHAFT)	1	
8	26	36556	SEAL, WATER TUBE	1	1
9	23	86214	SPACER, WATER TUBE SEAL	1	
10	54	79791	CLAMP, CO-PILOT	1	
11		88669	MOUNT, RUBBER - DRIVE SHAF	2	
12	23	74308	BUSHING, RUBBER MOUNT	2	
13		98168A 1	BRACKET ASSEMBLY, STEERING	1	
14	10	75840	SCREW, STEERING ARM BRAC	4	
15		98288	HANDLE, STEERING	1	
16		87668	GRIP, STEERING HANDLE	1	
17	10	98292	SCREW, STEERING HANDLE TO	1	
18	12	98289	WASHER, STEERING HANDLE S	1	
19	12	98290	WASHER, STEERING HANDLE S	2	
20	12	98291	WASHER, STEERING HANDLE S	1	
21	11	35814	NUT, GEAR HOUSING STUD	1	
22		86055	HANDLE, SHIFT	1	
23		86056A 1	SHAFT, SHIFT	1	
24	10	69560	SCREW, SHIFT HANDLE TO SHA	1	
25	13	26996	LOCKWASHER, SHIFT HANDLE S	1	
26		66414	CAM, SHIFT DETENT	1	
27	17	25905	ROLL PIN, CAM TO SHIFT SHAFT	1	
28	23	26856	BUSHING, SHIFT SHAFT	2	
29	25	20415	"O" RING, SHIFT SHAFT	1	1
30		72733	ARM, SHIFT	1	
31	10	72734	SET SCREW SHIFT ARM (5/16")	1	
32	18	21071	COTTER PIN, SHIFT SHAFT	1	
33	10	69067	SCREW, DRIVE SHAFT HOUSING	6	
34		98319	PLATE, ADAPTOR	1	
35	27	41631	GASKET, PLATE	1	1
36	27	98541	GASKET, POWERHEAD	1	1
37		87664	HANDLE, CARRING	2	
38	10	28635	SCREW, HANDLE TO ADAPTOR	4	
39	12	21249	WASHER, HANDLE SCREW	4	
40	24	39627	SPRING, DETENT	1	
41		28601	PLATE, DETENT SPRING	1	