



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	97175	RECOIL STARTER	1		
2	50	89141	STARTER ROPE	1		
3		79470A 1	HANDLE AND RETAINER ASSE	1		
4		93498A 2	BRACKET ASSEMBLY, FLYWHEEL	1		
5		87934	LEG, BRACKET	1		
6	25	90329	GROMMET, BRACKET	2		
7	10	28635	SCREW, BRACKET AND LEG ATT	3		
8	11	28941	NUT, RECOIL STARTER ATTACH	4		
9		87886	CUP, STARTER	1		
10	256	7530	FLYWHEEL	1		
11	28	20094	KEY, FLYWHEEL	1		
12	11	20696	NUT, FLYWHEEL	1		
13	12	20346	WASHER, RECOIL STARTER STI	4		
14		98837	HOUSING, IGNITION MODULE	1		
15		88182	IGNITION MODULE	1		
16		88306	RETAINER, IGNITION MODULE	1		
17	10	88307	SCREW, WIRE TO HOUSING (5/1	1		
18		88188	BUTTON, FRICTION-HOUSING	1		
19	24	90304	SPRING, COMPRESSION-FRICTIC	1		
20	10	88186	SET SCREW, FRICTION BUTTON	1		
21		87885	IGNITION COIL	1		
22	84	99215A25	LEAD WIRE ASSEMBLY	1		
23	85	63709A 1	PROTECTOR ASSEMBLY, SPAF	1		
24	33	12127	SPARK PLUG (NGK #BP6HS-10)	1		
24	33	88090	SPARK PLUG (CHAMPION #QL81	1	CANADA & BELGIUM	
25	10	60605	SCREW, IGNITION COIL (3/4")	2		
26		88221	TAB, IDLE STOP	1		
27		43377A 1	THROTTLE LEVER ASSMEBLY	1		
28	10	20665	SCREW, THROTTLE LEVER	2		
29	84	65773A 9	WIRE ASSEMBLY, GROUND	1		