



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1580	7601A 3	DRIVE SHAFT HOUSING ASSEMBLY	1	UNITED STATES 5571989 AND 1	
1	1580	7723A 4	DRIVE SHAFT HOUSING ASSEMBLY	1	UNITED STATES 5571990 AND 1	
2	16	68927	STUD, DRIVE SHAFT HOUSING	1		
2	16	75321	STUD, DRIVE SHAFT HOUSING	1		
3	10	79953	SCREW, GREASE FILLER	1		
4	12	20260	WASHER, GREASE FILLER SCF	1		
5	32	88996	WATER TUBE (SHORT SHAFT)	1		
5	32	88997	WATER TUBE (LONG SHAFT)	1		
6	266	36556	SEAL, WATER TUBE	1		1
7	23	86215	SPACER, WATER TUBE SEAL	1		
8	54	79791	CLAMP, CO-PILOT	1		
9		88669	MOUNT, RUBBER-DRIVE SHAFT	2		
10	23	74308	BUSHING, RUBBER MOUNT	2		
11		68990A 3	BRACKET ASSEMBLY, STEERING	1	UNITED STATES 5571989 AND 1	
11		89744A 1	BRACKET ASSEMBLY, STEERING	1	UNITED STATES 5571990 AND 1	
12	10	75840	SCREW, STEERING ARM BRAC	4		
13	19	88184	PLUG, DRIVE SHAFT HOUSING	1	UNITED STATES 5571989 AND 1	
14	10	69067	SCREW, DRIVE SHAFT HOUSING	6		
15		90253	PLATE, ADAPTOR	1		
16	27	88138	GASKET, PLATE TO DRIVE SHAFT	1	UNITED STATES 5571989 AND 1	
16	27	90254	GASKET, PLATE TO DRIVE SHAFT	1	UNITED STATES 5571990 AND 1	
17	27	88139	GASKET, PLATE TO POWERHEAD	1	UNITED STATES 5802240 AND 1	
17	27	92875	GASKET, PLATE TO POWERHEAD	1	UNITED STATES 5802241 AND 1	
18		87664	HANDLE, CARRYING	1		
19	10	54615	SCREW, HANDLE TO ADAPTOR	4		
20	12	21249	WASHER, HANDLE SCREW	4		
21		87667	HANDLE, STEERING	1		
22		87668	GRIP, STEERING HANDLE	1		
23	10	63327	SCREW, STEERING HANDLE TO ADAPTOR	1		
24	13	53166	LOCKWASHER, STEERING HANDLE	1		
25	12	56720	WASHER, STEERING HANDLE SCREW	2		
26	12	26825	WASHER, STEERING HANDLE SCREW	1		
27	11	68292	NUT, STEERING HANDLE SCREW	1		
28	11	35814	NUT, GEAR HOUSING STUD	1		
28		75311	ADAPTOR, DRIVE SHAFT HOUSING	1		
28		76265	BEARING BLOCK, DRIVE SHAFT	1		
-	27	88139A.79	GASKET SET			