



2531

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
24	91	63209	HEAT LAMP	1		
25	31	85560	THRUST BEARING	1		
26	91	13779	BEARING REMOVER	1		
	91	31229A 7	BEARING REMOVAL AND INSTAL	1		
27		NSS	NOT SOLD SEPARATE, Expand	1	(P/N-CG-41-11)	
28		NSS	NOT SOLD SEPARATE, Collet	1	(P/N-CG-41-14)	
29	11	24156	NUT	1		
30	12	34961	WASHER	1		
31	91	29310	PLATE	1		
32	91	31229	SHAFT	1		
33	91	36571T	DRIVESHAFT BEARING WRENCH	1		
34	91	37323	DRIVER ROD	1		
35	91	15755T	MANDREL	1		
36	91	36569T	MANDREL	1		
37	91	27780	PULLER	1		
38	91	37241	PULLER PLATE	1		
39	91	37312T	DRIVER HEAD	1		
40	91	817011T	NEEDLE BEARING CARRIER INS	1		
41	91	83180M	DRIVESHAFT HOLDING TOOL	1		
42	91	825197T	OIL SEAL TOOL	1		
43	91	817007T	BEARING CARRIER SEAL INSTAL	1		
44	91	825198	MANDREL	1		
45	91	825199	PILOT	1		
46	91	825200A 1	SPRING HOOK	1		
47	91	826872	FORWARD GEAR BEARING INST	1		
48		FT8950	TESTER KIT	1		
49	91	12349A 2	PINION GEAR LOCATION TOOL, I	1		
50	91	13945	BEARING INSTALLATION TOOL	1		
51	91	13949	OIL SEAL DRIVER	1		