



2531

## Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
24	91	63209	HEAT LAMP			
25	31	85560	THRUST BEARING			
26	91	13779	BEARING REMOVER			
	91	31229A 7	BEARING REMOVAL AND INSTAL			
27		NSS	Not Sold Separate, Expanding ro			
28		NSS	Not Sold Separate, Collet (P/N-C)			
29	11	24156	NUT			
30	12	34961	WASHER			
31	91	29310	PLATE			
32	91	31229	SHAFT			
33	91	36571T	DRIVESHAFT BEARING WREN			
34	91	37323	DRIVER ROD			
35	91	15755T	MANDREL			
36	91	36569T	MANDREL			
37	91	27780	PULLER			
38	91	37241	PULLER PLATE			
39	91	37312T	DRIVER HEAD			
40	91	817011T	NEEDLE BEARING CARRIER INS			
41	91	83180M	DRIVESHAFT HOLDING TOOL			
42	91	825197T	OIL SEAL TOOL			
43	91	817007T	BEARING CARRIER SEAL INSTAL			
44	91	825198	MANDREL			
45	91	825199	PILOT			
46	91	825200A 1	SPRING HOOK			
47	91	826872	FORWARD GEAR BEARING INST			
48		FT8950	TESTER KIT			
49	91	12349A 2	PINION GEAR LOCATION TOOL, I		SN# USA-0T979999/BEL-0P3254	
49	91	12349A05	TOOL, Pinion Locating		SN# USA-0T980000/BEL-0P325E	
50	91	13945	BEARING INSTALLATION TOOL			
51	91	13949	OIL SEAL DRIVER			