



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	4019	825239A13	TOP COWL	1	(BLACK) ELECTRIC	
1	4019	825239A14	TOP COWL	1	(SILVER) ELECTRIC	
2	4019	825239A11	TOP COWL	1	(BLACK) MANUAL	
2	4019	825239A12	TOP COWL	1	(SILVER) MANUAL	
3		813549F 3	COWL SUPPORT BRACKET	1	(REAR)	
4		828433	SPACER-BRACKET	1		
5	10	832086 30	SCREW	3		
6	11	40063 2	NUT	3		
7		18173	BRACKET	1		
8	10	40067 31	SCREW (M6 X 16)	2		
9		813546 2	COWL MOUNT	3		
10		47341A 1	STARTER ROPE	1	(MANUAL STARTING)	
11		828468	COWL SUPPORT BRACKET	1	(FRONT)	
12		828503	LATCH KEEPER	1		
13	10	832086 16	SCREW	3		
14	11	40063 2	NUT	1		
15		828178	DUCT AIR INLET	1		
16		NSS	INDUCTION INSERT	1		4
17	10	F2317	SCREW (1/4-20 X 7/8 IN.)	2		
18		831905	SEAL	1		
19		813504A 1	OIL LEVEL GAUGE	1	ELECTRIC	
20		813505	GROMMET	1	ELECTRIC	
21		11317 1	RETAINER	1	ELECTRIC	
22	11	11316 1	SPEEDNUT	1	ELECTRIC	
23		828180A 1	SOUND BLANKET KIT (ALL)	1		
24		NSS	SOUND BLANKET	1	(STBD. & REAR)	4
25		NSS	SOUND BLANKET	1	(PORT & REAR)	4
26		NSS	TAPE	1		4
27		NSS	ENVELOPE	1		4
28	37	824093 16	DECAL-SHIFT	1		
29	37	855577 8	DECAL-EPA INFO (TOP COWL INI	1	1998)	8