

## Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
0	91	30500A 2	GREASE KIT	1		
0	91	36392	CARBURETOR SCALE	1		
0	91	89045 1	ADAPTOR TOOL	1	(Electrical/Ignition)	
0	91	52344	HOLDER TOOL	1	(Electrical/Ignition)	
0	91	849154T 1	PULLER ASSEMBLY	1	(Electrical/Ignition)	
0	91	99750A 1	MULTI METER	1	(Electrical/Ignition)	
0	91	52024A 1	SWITCH ASSEMBLY	1	(Electrical/Ignition)	
0	91	59339	SERVICE TACHOMETER	1	(Electrical/Ignition)	
0	91	850439T 1	TESTER	1	(Electrical/Ignition)	
0	91	63998A 1	GAP TOOL	1	(Electrical/Ignition)	
0	91	850439T 1	TESTER	1	(Electrical/Ignition)	
0	91	99379	TIMING LIGHT	1	(Electrical/Ignition)	
0	84	825207A 1	TPI/CDM TEST HARNESS	1	(Electrical/Ignition)	
0		NSS	NOT SOLD SEPARATE (Snap On	1	(Trim/Tilt System)	
0		NSS	NOT SOLD SEPARATE (Snap On	1	(Trim/Tilt System)	
0	91	822778A 3	DOWN PRESSURE KIT	1	(Trim/Tilt System)	
0	91	99750A 1	MULTI METER	1	(Trim/Tilt System)	
0	91	74951	SPANNER WRENCH	1	(Trim/Tilt System)	
0	91	63209	HEAT LAMP	1	(Trim/Tilt System)	
0	91	29287	GAUGE TOOL	1	(Powerhead)	
0	91	55919	SLEEVE	1	(Powerhead)	
0	91	849154T 1	PULLER ASSEMBLY	1	(Powerhead)	
0	91	90455T	LIFTING EYE	1	(Powerhead)	
0	91	77109A 3	INSTALLER KIT	1	(Powerhead)	
0	91	52952T 1	REMOVAL TOOL, Piston Pin Lock	1	(Powerhead)	
0	91	74607A 3	INSTALLER KIT, Piston Pin	1	(Powerhead)	
0	91	24697	EXPANDER TOOL, Piston Ring	1	(Powerhead)	
0	91	66274	TORQUE WRENCH, (0-150 lb-in)	1	(Powerhead)	
0	91	37241	PULLER PLATE	1	(Powerhead)	
0	91	34569A 1	PULLER ASSEMBLY, Slide Hamme	1	(Gear Housing)	
0	31	85560	THRUST BEARING	1	(Gear Housing)	
0	91	66274	TORQUE WRENCH, (0-150 lb-in)	1	(Gear Housing)	
0	91	817006	WATER PUMP BASE SEAL INSTA	1	(Gear Housing)	
0	91	14310T 1	WEAR SLEEVE INSTALLATION T	1	(Gear Housing)	

NO IMAGE