



STARTER REWIND

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	11	20166	NUT-SHEAVE SHAFT (LEFT HAN)	1		
2	14	61004	TAB WASHER-SHEAVE SHAFT N	1		
3		18647 1	STARTER HOUSING	1		
4	50	44255A 1	STARTER SHEAVE	1		
5		44508	STARTER PAWL	1		
6	10	54523	SCREW-STARTER HOUSING	3		
7	13	26993	LOCKWASHER-STARTER HOUSI	3		
8	10	45210	SCREW-STARTER HOUSING	2		
9	11	20190	NUT-STARTER HOUSING SCREW	2		
10		61002	PLATE-STARTER REWIND	1		
11	24	39502A 1	SPRING-STARTER REWIND	1		
12	23	87649	BUSHING-SPRING GUIDE	1		
13	24	87651	SPRING-STARTER PAWL	1		
14	53	87706	E-RING-STARTER PAWL	1		
15	23	63061	SPACER-SHEAVE SHAFT	1		
16	12	35559	WASHER-STARTER REWIND	1		
17		94962	LEVER	1		
18	13	20160	WAVE WASHER	1		
19		87656	SHEAVE SHAFT	1		
20	50	12066A 9	STARTER ROPE ASSEMBLY	1		
20		47341A 1	STARTER ROPE (FOR MANUAL S	1		
21		85174A 1	HANDLE AND RETAINER ASSEM	1		
22		18888 1	CABLE-INTERLOCK	1	SUPERSEDES TO ANOTHER PA	
23	10	69022	SCREW-INTERLOCK CABLE ATT,	1		
24	12	73288	WASHER-INTERLOCK CABLE SC	1		
25	12	37998	WASHER	1		
26	10	812832	SCREW	1		
27	24	76140 1	SPRING-INTERLOCK CAM SCREW	1		
28		42820 1	CAM-INTERLOCK	1		
29	10	76138	SCREW-INTERLOCK CAM (1-1/8)	1		
30		79371	ACTUATOR-INTERLOCK	1		
31	18	27769	COTTER PIN-INTERLOCK CABLE	2		
32	10	76137	SCREW-INTERLOCK ACTUATOR	1		
33	24	76139	SPRING-INTERLOCK ACTUATOR	1		
34		42690	BUSHING	1		
35	53	818853	RETAINING RING	1		
36		813544A 1	REST ASSEMBLY	1		
37		813641	SEAL	1		
38		816877 2	PRIMER BULB	1		
39	32	99130122	TUBING	1		
40	94	99591A 5	STOP SWITCH ASSEMBLY	1		