



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	394	1069A 1	MAGNETO ASSEMBLY, COMPLE	1,1,1,1		
-	394	1069A 2	MAGNETO ASSEMBLY, COMPLE	1,1,1,1		
-	394	1652A 1	MAGNETO ASSEMBLY, COMPLE	1,1,1,1		#
1	394	1066	FRAME, MAGNETO HOUSING	1,1,1,1	N.L.A.-ORDER A-394-1570A1 FR	
1	394	1570	FRAME, MAGNETO HOUSING	1,1,1,1		
2	10	25510	SCREW, SET-COIL BRIDGE	2,2,2,2		
3	394	1051	LOCKWIRE, COIL BRIDGE SET	1,1,1,1		
4	30	24998	BEARING, BALL (DRIVE END)	1,1,1,1		
5	394	1067	MAGNETO ROTOR AND SHAFT	1,1,1,1		
6	30	24997	BEARING, BALL (OPPOSITE DR	1,1,1,1		
7	394	1068	SUPPORT, BALL BEARING	1,1,1,1		
7	394	1637	SUPPORT, BALL BEARING	1,1,1,1		#
8	10	25509	SCREW AND LOCKWASHER, S	3,3,3,3		
9	394	1053A 1	WIRE ASSEMBLY, PRIMARY GF	1,1,1,1		
10	10	24609	SCREW, PRIMARY GROUND (H	1,1,1,1		
10	10	29182	SCREW, PRIMARY GROUND (H	1,1,1,1		
--	12	30267	WASHER, PRIMARY GROUND	1,1,1,1		
11	394	1579	INSULATOR, PRIMARY GROU	1,1,1,1		
12	12	25719	WASHER, INSULATING-PRIMA	2,2,2,2		
12	12	29099	WASHER, INSULATING-PRIMA	2,2,2,2		
13	23	25512	BUSHING, INSULATING-HOUSI	1,1,1,1		
13	23	29101	BUSHING, INSULATING-HOUSI	1,1,1,1		
14	12	20192	WASHER, PRIMARY GROUND	1,1,1,1		
14	12	26014	WASHER, PRIMARY GROUND	1,1,1,1		
15	11	28656	NUT, LOCK-PRIMARY GROUND	1,1,1,1		
15	11	24656	NUT, LOCK-PRIMARY GROUND	1,1,1,1		
16	11	21923	NUT, PRIMARY GROUND SCRE	1,1,1,1		
16	11	20645	NUT, PRIMARY GROUND SCRE	1,1,1,1		
17	394	1128A 1	COIL ASSEMBLY	1,1,1,1		
18	394	1050	CLIP, COIL-HIGH TENSION	1,1,1,1		
19	13	23836	LOCKWASHER, COIL TERMIN	1,1,1,1		
20	394	1131	NUT, COIL CLIP FASTENING	1,1,1,1		
21	394	1100A 3	BREAKER ASSEMBLY	1,1,1,1		
--	394	1163	GROMMET, PLASTIC-BREAK	1,1,1,1		
--	10	26008	SCREW, BREAKER TERMINA	1,1,1,1		
--	13	26994	LOCKWASHER, BREAKER TE	1,1,1,1		
--	394	1106A 1	HOLDER AND CAM WICK ASS	1,1,1,1		
21	393	1504A 6	BREAKER ASSEMBLY	1,1,1,1		#
22	393	1586	GROMMET, PLASTIC-BREAK	1,1,1,1		
23	16	29230	STUD, PRIMARY LEAD AND T	1,1,1,1		
24	11	28226	NUT, PRIMARY LEAD FASTE	1,1,1,1		