



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1		32970A 1	RECTIFIER ASSEMBLY	1,1,1			
2	32	29267	SLEEVE, RECTIFIER LEAD (REI	1,1,1			
3		22647	DISCONNECT, KNIFE SPLICE -I	3,3,3			
4	13	26993	LOCKWASHER, RECTIFIER MO	1,1,1			
5	11	21929	NUT, RECTIFIER MOUNTING S	1,1,1			
6		28597	BRACKET, RECTIFIER MOUNTIN	1,1,1			
7		21091	SCREW, RECTIFIER BRACKET TI	2,2,2			
8	11	24652	NUT, BRACKET MOUNTING SCR	2,2,2			
9	54	24836	CLAMP, LEAD WIRE TO RECTIFI	2,2,			
9	54	24836	CLAMP, LEAD WIRE TO RECTIFI	,,1			
10	54	22740	CLAMP, LEAD WIRE TO RECTIFI	,,1			
11	10	30009	SCREW, LEAD WIRE CLAMP TO	2,2,2			
12		22789	"D" WASHER, CLAMP FASTENIN	2,2,2			
13		32445	SOLENOID, STARTER	1,1,1			
14		28016A 1	GROUND STRAP ASSEMBLY, SO	1,1,1			
15		25596	WIRE, STRTER TO STARTER SC	1,1,1			
16	13	26993	LOCKWASHER, SOLENOID TERM	2,2,2			
17	11	20083	NUT, SOLENOID TERMINAL - INE	1,1,1			
17	11	26062	NUT, CAP - SOLENOID TERMINA	1,1,1			
18	13	26996	LOCKWASHER, SOLENOID TERM	1,1,1			
19	11	20645	NUT, SOLENOID TERMINAL (#10	2,2,2			
20	10	29238	SCREW, SOLENOID TO STARTER	2,2,2			
--	13	26992	LOCKWASHER, SOLENOID FATE	2,,			
21		28370	WIRING HARNESS (INTERNAL)	1,1,1			
22	24	28975	SPRING, GARTER - INTERNAL W	1,1,1			
23		26079	PLATE, BACKING - WIRING HAR	1,1,1			
24	10	26128	SCREW, BACKING PLATE TO BO	4,4,4			
25	54	22783	"S" CLIP, WIRING HARNESS LEA	3,3,3			