



GEAR HOUSING (DRIVE SHAFT)

				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1643	7406A34	GEAR HOUSING ASSEMBLY (SHI)	1		
-	1643	7406A35	GEAR HOUSING ASSEMBLY (LOP)	1		
-	1643	7406A43	GEAR HOUSING ASSEMBLY (X-LO)	1		
1	1643	7406A16	GEAR HOUSING ASSEMBLY	1		
2	22	85822A	CONNECTOR ASSEMBLY, SPEE	1		
3	17	85500	DOWEL PIN-GEAR HOUSING	2		
4	16	33778	STUD, WATER PUMP/BASE (3		
5	16	57933	STUD, GEAR HOUSING	2		
5	16	96126	STUD, GEAR HOUSING (X-LO)	2		
6	31	62091	ROLLER BEARING-DRIVE SH.	1		
7		72849A	SCREEN ASSEMBLY, WATER	1		
8	10	36070	SCREW, WATER INTAKE SCF	1		
9	11	45812	NUT, WATER INTAKE SCREE	1		
10		92815	PLATE, SUPPORT-EXHAUST TI	1		
11		37721	SEAL, EXHAUST TUBE	1		1.7
12	43	98097	PINION GEAR-DRIVE SHAFT	1		
13	11	55910	NUT, PINION GEAR TO DRIVE :	1		
14	27	77417	GASKET, WATER PUMP BASE	1		1.7,8
15	25	26722	"O" RING, WATER PUMP BASE	1		1.7,8
16	46	77177A	WATER PUMP BASE ASSEMBL	1		7
17	26	79831	OIL SEAL, WATER PUMP BAS	1		7,8
18	26	90562	OIL SEAL, WATER PUMP BAS	1		7,8
19	17	35973	DOWEL PIN, WATER PUMBE	2		7
20	27	32769	GASKET, LOWER-WATER PUM	1		1.7,8
21		54705	FACE PLATE-WATER PUMP BA	1		7
22	27	32770	GASKET, UPPER-FACE PLATE	1		1.7,8
23	47	89983	IMPELLER, WATER PUMP	1		7
24	28	56662	KEY, IMPELLER DRIVE	1		7
25	46	77822A	WATER PUMP BODY ASSEMBL	1		7
26		48753	INSERT, WATER PUMP BOD	1		7
27	26	38452	SEAL, RUBBER-WATER INLE	1		1.7,8
28	12	38453	WASHER, NYLON-WATER PL	1		7,8
29	12	29245	WASHER, BODY AND BASE ST	3		
30	11	35888	NUT, BODY AND BASE SUTDS	3		
31	25	20273	RING, RUBBER	1		7,8
32		88868A	SEAT ASSEMBLY	1		
33		86304	SEAL, SPLINED	1		1
34	10	79953	SCREW, GREASE FILLER	1		
35	22	67892	SCREW, DRAIN-MAGNETIC	1		
36	12	20260	WASHER, FILLER/DRAIN SCRE	2		7,8
37		88181	SLEEVE, LUBRICATION DRIVE	1		