



STEERING HANDLE

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		48416	CAP, STEERING HANDLE GRIP	1		
2	11	20586	NUT, STEERING HANDLE ARM	1		
3	12	21631	WASHER, STEERING HANDLE A	1		
4		58192A	GRIP, STEERING HANDLE ARM	1		
5		48414	HOUSING, DRIVE WHEEL - STEE	1		
6		48516A	DRIVE WHEEL AND ROD ASSEM	1		
7		48405	ARM (USE WITH PUSH BUTTON)	1		
7		48405A	ARM (USE WITH TOGGLE SWITC	1		
8		48519	PLATE, COVER - DRIVE WHEEL	1		
9	27	48518	GASKET, COVER PLATE	1		
10	10	28192	SCREW	4	DRIVE WHEEL COVER PLATE F.	
11		78551	CONDUIT, CABLE	1		
12		48520	CABLE, THROTTLE	1		
13		89578	CONNECTOR, CONTROL LINKAG	1		
14	10	89601	SCREW, SET - THROTTLE CABLE	1		
15		89566	TUBE, THROTTLE CABLE GUIDE	1		
16		29880	GUIDE, THROTTLE CABLE	1		
17		20007	ANCHOR, THROTTLE CABLE	1		
18	10	20518	SCREW, THROTTLE CABLE ANC	2		
19		48404	BRACKET, STEERING HANDLE	1		
20		48416	CAP, STEERING HANDLE BRACK	1		
21	10	48476	SCREW, STEERING HANDLE BR	1		
22	12	48477	WASHER, STEERING HANDLE B	1		
23	12	48526	WASHER, NYLON - HANDLE BRA	1		
24	23	28919	BUSHING, NYLON - HANDLE BR	2		
25	23	48525	SPACER, STEERING HANDLE BF	1		
26	12	48527	WASHER, NYLON - HANLDE BRA	1		
27	13	48478	WAVE WASHER, STEERING HAN	2		
28	12	49636	WASHER, NYLON - HANDLE BRA	1		
29	11	20220	NUT, STEERING HANDLE BRACK	1		
30	10	35786	SCREW, BRACKET TO ENGINE (2		
31	14	43589	ER, BRACKET SCREW	2		
32		78812A	DETENT, SHIFT LEVER	1		
33	10	48409	SCREW, SHIFT LEVER DETENT	2		
34		48568	SHIFT LEVER	1		
35	23	48237	BUSHING, NYLON - SHIFT LEVE	1		
36	12	34931	WASHER, SHIFT LEVER	1		
37	11	34863	NUT, SHIFT LEVER TO STEERIN	1		
38		49563	ROD, SHIFT	1		
39		48419	ROD END, SHIFT ROD	1		
40	22	48475	BUSHING, NYLON, SHIFT ROD C	1		