


STARTER MOTOR, RECTIFIER AND WIRING HARNESS

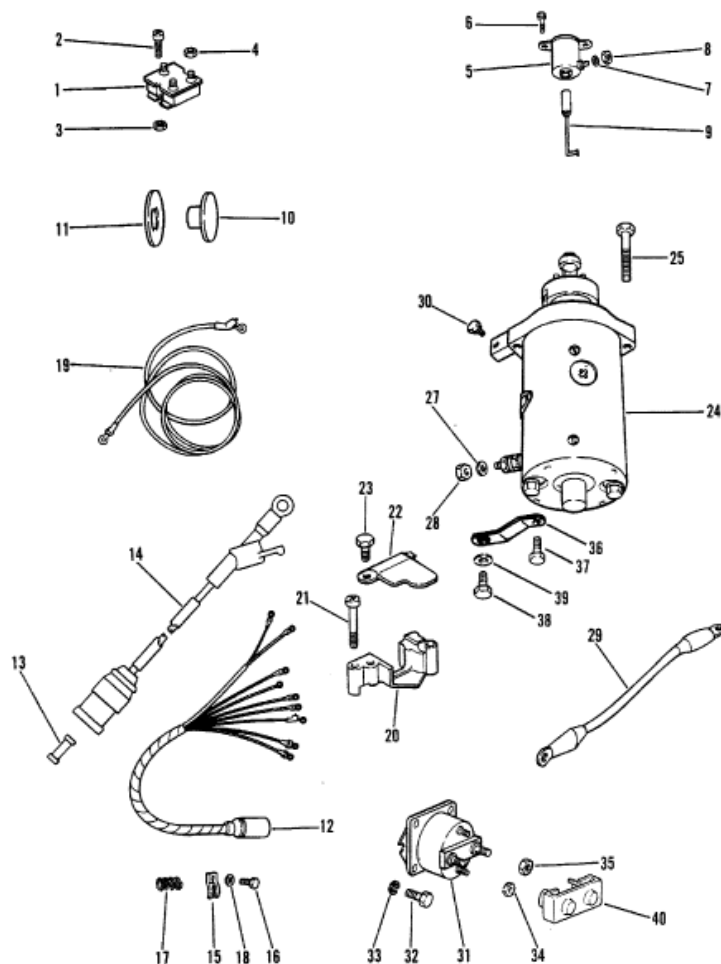

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		62351A 1	RECTIFIER ASSEMBLY	1		
2	10	20646	SCREW	2	RECTIFIER TO FRONT SUPPOR	
3	11	27164	NUT, RECTIFIER FASTENING SC	2		
4	11	45076	NUT, RECTIFIER TERMINAL (10-3	3		
5		54293A11	CHOKE SOLENOID ASSEMBLY	1		
6	10	25299	SCREW	2	CHOKE SOLENOID FRONT SUPI	
7	13	26996	LOCKWASHER, CHOKE SOLEND	1		
8	11	45076	NUT, CHOKE SOLENOID TERMIN	1		
9		89008A 2	PLUNGER ASSEMBLY, CHOKE SI	1		
10	19	35827	PLUG	1	BOTTOM COWL PART OF BOTT	
11	11	30428	FASTENER	1	PLUG TO BOTTOM COWL PART	
12	84	96219A 2	WIRING HARNESS (BOILT/NUT (1		
12	84	96219A 5	WIRING HARNESS (BULLET CON	1		
13	88	79091	FUSE			
14	84	95084A 2	WIRE ASSEMBLY, FUSE	1		
15		88751	CLAMP, WIRING HARNESS	1		
16	10	23702	SCREW, WIRING HARNESS CLAI	1		
17	24	28357	SPRING, WIRING HARNESS CLA	1		
18	12	72761	WASHER, WIRING HARNESS CL	1		
19	84	88439A 3	BATTERY CABLE ASSEMBLY (PO	1		
19	84	88439A 4	BATTERY CABLE ASSEMBLY (NE	1		
20		88620	BRACKET, HARNESS SUPPORT	1		
21	10	73280	SCREW, HARNESS SUPPORT BF	2		
22		88617	COVER, HARNESS SUPPORT BR	1		
23	10	28635	SCREW, HARNESS SUPPORT BF	2		
24	50	41583	STARTER MOTOR ASSEMBLY (1	1		
25	10	35213	SCREW	2	STARTER MOTOR TO CRANKC	
27	13	26992	LOCKWASHER, CABLE TO STAR	1		
28	11	20890	NUT, CABLE TO STARTER MOTC	1		
29	84	88809A 6	CABLE, STARTER TO SOLENOID	1		
30	10	69035	SCREW	1	BATTERY CABLE TO STARTER	
31	89	96158	STARTER SOLENOID	1		
32	10	98253	SCREW, SOLENOID TO BRACKE	2		
33	13	26992	LOCKWASHER, STARTER SOLEI	2		
34	11	26419	NUT, STARTER SOLENOID TERM	2		
35	11	94330	NUT, STARTER SOLENOID TERM	2		
36		42729A 1	BRACKET, STARTER MOTOR TO	1		
37	10	32079	SCREW, BRACKET TO STARTE	1		
38	10	69022	SCREW, BRACKET TO CRANKC	1		
39	12	89302	WASHER, BRACKET SCREW	1		
40	95	92861	INSULATOR, STARTER SOLENO	1		